

User Manual

# Portavo® 908 MULTI

Portable Meter



Read before installation.  
Keep for future use.



**Returns**

Clean and securely package the product before returning it to Knick Elektronische Messgeräte GmbH & Co. KG.

If there has been contact with hazardous substances, the product must be decontaminated or disinfected prior to shipment. The consignment must always be accompanied by a corresponding return form to prevent service employees being exposed to potential hazards.

Further information can be found at [www.knick.de](http://www.knick.de).

**Disposal**

Local codes and regulations must be observed when disposing of the product.

<b>Package Contents</b> .....	<b>5</b>
<b>Overview of the Portavo 908</b> .....	<b>6</b>
Intended Use.....	6
Value-Added Features .....	7
Protective Cover.....	8
Hook .....	8
Display and Keypad.....	9
Inserting the Batteries .....	10
<b>Commissioning</b> .....	<b>10</b>
Connecting a Sensor .....	11
Switching On the Meter .....	12
Icons .....	13
<b>Information</b> .....	<b>14</b>
Calibration Record .....	14
Sensor Information .....	14
Sensor Diagram (pH and Oxy Only).....	15
Sensor Monitor.....	16
Messages .....	16
MemoLog (Memosens Only).....	16
Device Info .....	17
Device Test .....	17
<b>pH Configuration</b> .....	<b>18</b>
<b>ORP Configuration</b> .....	<b>20</b>
<b>Conductivity Configuration</b> .....	<b>22</b>
<b>Oxygen Configuration</b> .....	<b>24</b>
<b>pH Calibration</b> .....	<b>26</b>
Calimatic Calibration .....	26
Manual Calibration .....	27
Data Entry Calibration .....	27
pH/ORP Combo Sensor Calibration .....	28
<b>ORP Calibration</b> .....	<b>28</b>
<b>ISFET Calibration</b> .....	<b>29</b>
<b>Conductivity Calibration</b> .....	<b>30</b>
Auto Calibration.....	30
“Entry of Solution” Calibration .....	31
Cell Constant / Cell Factor Calibration .....	31
Installation Factor Calibration.....	31
Zero Calibration .....	31

<b>Oxygen Calibration .....</b>	<b>32</b>
Calibration in Air .....	32
Zero Calibration .....	33
Data Entry Calibration .....	33
<b>Measurement.....</b>	<b>34</b>
Toggling the Measurement Display .....	34
<b>Printing.....</b>	<b>35</b>
Printing Currently Measured Values .....	35
Printing a Calibration Record.....	36
<b>Data Logger .....</b>	<b>37</b>
Operating Modes of the Data Logger (Logger Type) .....	38
Configuring the Data Logger.....	40
Increasing the Battery Life .....	40
Starting/Stopping the Data Logger.....	42
Viewing the Logger Data.....	42
Delete Logger Data.....	42
<b>Paraly SW112 PC Software.....</b>	<b>44</b>
<b>Error and Status Messages.....</b>	<b>45</b>
“Sensoface” Messages.....	45
Sensoface Criteria.....	46
Info and Help Texts .....	48
Error Messages .....	48
<b>Options .....</b>	<b>50</b>
Option 001 SOP (Standard Operating Procedure) .....	50
Entering the Rescue PIN Code .....	55
Option 002 Temp.cal .....	58
Option 003 Multichannel .....	59
<b>Product Line .....</b>	<b>64</b>
Accessories/Options.....	64
pH, ORP Accessories .....	66
Accessories for Conductivity .....	67
Accessories for Oxygen .....	68
<b>Specifications.....</b>	<b>69</b>
<b>Buffer Tables .....</b>	<b>75</b>
<b>Index.....</b>	<b>86</b>

Check the shipment to ensure it is complete and undamaged.

The package of the Portavo 908 MULTI includes:

- Device, incl. premounted quiver
- 4 batteries (AA)
- Carrying strap
- USB cable, 1.5 m
- Safety Guide
- Quickstart Guide in various languages
- Test report 2.2 according to EN 10204

User Manuals, the Paraly SW112 PC software, and other product information can be downloaded from [www.knick.de](http://www.knick.de).



## Intended Use

The Portavo 908 MULTI is a portable multiparameter meter for use with Memosens sensors or the SE340 optical oxygen sensor. The micro USB port allows the meter to be connected to a printer for printing currently measured values or a calibration record including sensor data. The meter automatically recognizes the connected sensor and accordingly selects the corresponding process variable. By simply replacing the sensor, the meter can be used for measuring **conductivity, pH/ORP** or **oxygen (also optical)**.

Operation is simple and intuitive, supported by detailed information and help texts.

The meter stands out by the following features:

- Use of digital Memosens sensors or the SE340 optical oxygen sensor
- A detachable quiver protects the sensor and prevents it from drying out. Furthermore, it can be used for calibration.
- The rugged housing is made of a high-performance polymer. It provides high impact resistance and dimensional stability even when exposed to extreme moisture.
- Scratch-proof clear glass display, perfectly readable even after years.
- Long operating time with one set of batteries (4x AA) or use of a Li-ion battery for reliable operation even at high or very low operating temperatures
- Data logger with 10,000 values
- Micro USB port for communication with Paraly SW112 software for data evaluation of digital sensors (Memosens) or connecting a printer
- Sensoface icons provide single-glance information on the sensor condition
- Real-time clock and indication of battery charging level
- Automatic compensation of ambient pressure for oxygen measurement
- At measuring temperatures from -20 to 100 °C / -4 to 212 °F, the temperature detector can be automatically identified.

## Value-Added Features

### Memosens

The Portavo 908 can communicate with Memosens sensors. These digital sensors are automatically identified and the meter switches to the appropriate measurement method. When a Memosens sensor is connected to the meter, it is indicated by the logo shown on the right. Furthermore, Memosens allows the storage of calibration data, which remains available and can still be used when the sensor is connected to another Memosens-capable device.



### Sensoface

Sensoface provides quick information on the sensor condition. The three "smiley" faces as shown on the right represent the sensor condition during measurement and after a calibration. When the condition deteriorates, a status message gives a further indication of the cause.



### Calimatic (pH)

Calimatic is a very convenient method for pH calibration with automatic buffer recognition. You only have to select the buffer set with the buffers used. The buffers can then be used in any order.

### Digital Optical Oxygen Measurement with SE340

Digital optical oxygen measurement reduces maintenance and simplifies handling.


### MemoView ZU1059

With the MemoView accessory, contactless querying of measuring points is possible when using Memosens without on-site display, e.g., MemoRail, or the Stratos Multi and Protos II 4400 transmitters. The measured values and sensor data are displayed on the Portavo.



### Protective Cover

The front of the meter is protected by a cover, which can be completely flipped over and secured to the back for operation.

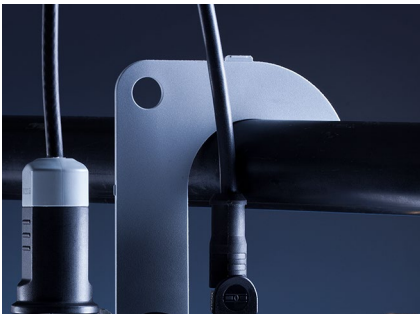

### Hook

A fold-out hook on the back allows the meter to be suspended. This leaves your hands free for the actual measurement. The nameplate is located beneath the hook.




### Protective Cover and Hook Combined

The two parts can be combined to form a benchtop stand, enabling convenient and fatigue-free work with the device at a laboratory table or desk.



## Display and Keypad

Display and keypad correspond directly via softkeys.

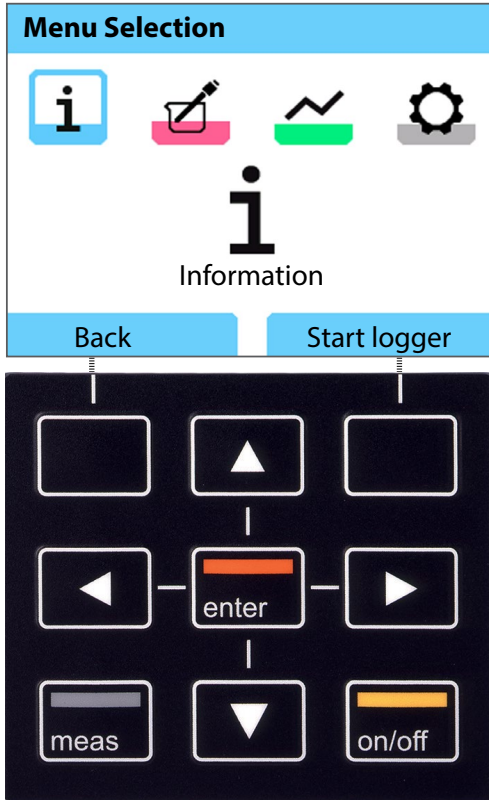

### Menu Icons



**Softkeys** Function is shown in the display above the key

**Arrow keys** Select / adjust entries

**enter** Confirm an adjustment

**on/off** Switch on / off

**meas** Switch on / Go directly to measuring mode / Toggle the display / Display time and date

Check the shipment for transport damage and completeness (see Package Contents).

### ⚠ CAUTION!

Do not operate the device when one of the following conditions applies:

- the device shows visible damage
- failure to perform the intended function
- prolonged storage at temperatures above 70 °C / 158 °F
- after severe transport stresses

In this case, a professional routine test must be performed.

This test should be carried out at our factory.

## Inserting the Batteries







With four AA batteries, the Portavo has an operating time of up to 500 h when operated in logger mode (see page 40).

Open the battery compartment on the rear of the device. Be sure to observe the correct polarity when inserting the batteries (see markings in the battery chamber). Close the battery compartment cover and fasten it finger tight.

A special lithium-ion battery (ZU0925) suited to the battery compartment is available for the Portavo 908. Only this battery type can be charged directly from the USB port.


### A battery icon in the display indicates the battery power level:

	Icon fully filled	Batteries at full capacity.
	Icon partially filled	Battery capacity is sufficient.
	Icon empty	Battery capacity not sufficient. Calibration is possible, no logging.
	Icon blinks	Only a few operating hours remaining, measurement is still possible. <b>NOTICE!</b> It is absolutely necessary to replace the batteries.

## Connecting a Sensor

You can connect a Memosens sensor for pH/ORP, conductivity or oxygen measurement to the Portavo 908. You can also connect the Model SE340 optical oxygen sensor. The meter automatically recognizes the connected sensor and accordingly selects the corresponding process variable. Memosens is signaled in the display. In the basic configuration, note that only **one** sensor may be connected to the meter at a time.

Option 003 Multichannel enables simultaneous use of two sensors; see p. 59.

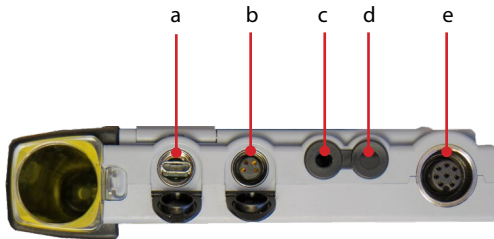

### Connections

- a - Micro USB port
- b - M8, 4 pins, for Memosens lab cable
- c - Not used
- d - Not used
- e - M12, 8 pins, for flexible connecting cable for Memosens sensors or SE340 sensor (optical oxygen)

Memosens sensors have a cable coupling, which allows convenient replacement of sensors while the cable remains connected to the meter.

The connecting cable is connected to socket **b** or **e**.

---

## Switching On the Meter



The meter can be switched on by pressing the **meas** or **on/off** key. If you press **meas**, the meter immediately switches to measuring mode.



After pressing the **on/off** key, the meter displays selected sensor information, incl. adjustment data, before it switches to measuring mode.

---


## Login (Option 001 SOP)

When using Option 001 SOP and with user management enabled, you will be prompted to enter your log-in data when the device starts; see p. 54:

PIN code	
Enter your log-in data.	
User	User 1
PIN code	****
Back	Next

## Icons

Important information about the state of the device:

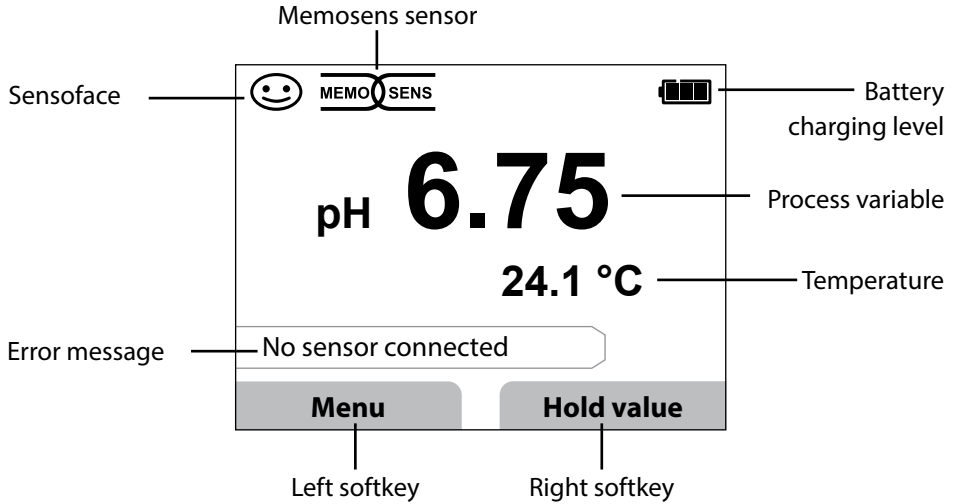

pH

ORP

Oxy

Cond

- 1) From within measuring mode, press the **Menu** softkey.
- 2) Select "Information" and confirm by pressing **enter**.
- 3) Select the desired submenu and confirm by pressing **enter**.

The different submenus are described below.

## Calibration Record

Shows the data of the last calibration performed on the currently connected sensor. When the right softkey has been set to "Print" in the Configuration menu, it can be used to print out the calibration record (via micro USB port).

## Sensor Information

Shows the data of the currently connected sensor. When MemoLog has been activated (in the Configuration menu), you can save the sensor data in the device by pressing the **Save** softkey. The following table shows the sensor information for the different sensors:

	pH/ pH/ORP**	Cond	Oxy	ISFET	ORP	Optical Oxy
Manufacturer	x	x	x	x	x	x
Order no.	x	x	x	x	x	x
Sensor serial no.	x	x	x	x	x	x
Membrane serial no.						x
TAG	x	x	x	x	x	
SW version	x	x	x	x	x	x
HW version	x	x	x	x	x	
Calibration <sup>*)</sup>	x	x	x	x	x	x
Zero point	x		x			x
Slope	x		x	x		x
ORP calibration <sup>*) **)</sup>	x					
Correction					x	
Nom. cell constant		x				
Temp offset	x	x	x		x	
Sensor operating time	x	x	x	x	x	x
Membrane operating time						x
Wear	x		x	x		
SIP	x	x	x	x	x	
CIP	x <sup>**) **)</sup>	x				
Autoclaving <sup>**) **)</sup>	x <sup>**) **)</sup>					
Cell constant		x				
Operating point				x		

\* latest calibration \*\* for pH/ORP combo sensor only

pH

Oxy

## Sensor Diagram (pH and Oxy Only)


Provides single-glance information on the following parameters of the connected sensor:

- Slope
- Zero point (operating point with Memosens ISFET)
- Sensocheck (pH) or leakage current (ISFET and Oxy)
- Response time
- Calibration timer
- Wear (Memosens)

Parameters which cannot be checked are shown as inactive (gray) and are set to 100 %.

The parameter values should lie between the outer (100 %) and inner (50 %) hexagon. When a value enters the inner hexagon (<50 %), the corresponding caption text flashes red (see example).

Example: Radar chart for a digital pH sensor (Memosens)

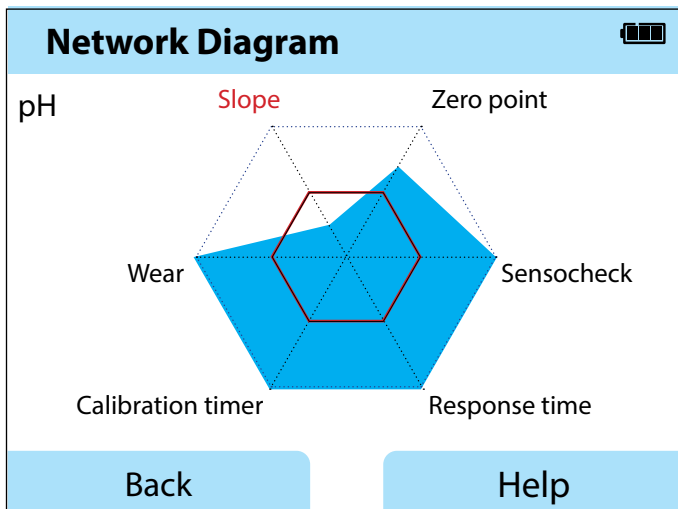

pH

ORP

Oxy

Cond

## Sensor Monitor

Shows the raw values available from the connected sensor:

<b>pH</b>	mV, temperature, glass impedance
<b>pH ISFET</b>	mV, leakage current, temperature
<b>ORP</b>	mV, temperature
<b>Cond</b>	Resistance, conductance, temperature
<b>Oxy</b>	Sensor current, leakage current, polarization voltage, partial pressure, air pressure, temperature
<b>Oxy, optical</b>	Partial pressure, temperature

## Messages

Shows all active error and status messages as well as supplementary help texts; see p. 45.

## MemoLog (Memosens Only)

Displays the individual calibration records stored in the device. You have the possibility to delete individual entries or all entries. The following parameters are displayed:

- Sensor type
- Serial no.
- TAG
- Calibration date
- Zero point
- Slope
- Cell constant (Cond sensor)
- Operating point (ISFET sensor)

**Background:** The device provides a calibration data logger, which must be activated in the configuration menu. With "MemoLog" activated, up to 100 calibration records can be directly saved to the device. After every calibration, the complete Memosens data will be recorded. Convenient management of the calibration data is possible using the MemoSuite or Paraly SW112 software.

MemoLog is not suitable for SE340 (optical oxygen sensor).



pH

ORP

Oxy

Cond

## Device Info

Shows the following device information:

- Name of station
- Serial number
- Software version
- Hardware version
- Air pressure
- Battery

## Device Test

A device self-test is automatically run in the background at regular intervals. It checks the memory modules listed below. A green checkmark shows that the test was successful.

- FLASH program memory
- FLASH data memory
- FLASH parameter memory
- RAM (working memory)

## Display Test

- 1) Select "Display test" and press **enter**.
- 2) The display lights up red, green, blue, and then white.
- 3) Press any key to stop the test.

## Keypad Test

- 1) Select "Keypad test" and press **enter**.
- 2) Press all nine keys one after the other.  
A green checkmark shows that a key functions properly.
- 3) Press any key to stop the test.

## pH Configuration

- 1) From within measuring mode, press the **Menu** softkey.
- 2) Select "Configuration" and press **enter** to confirm.
- 3) Adjust the settings as required.

The following table gives you an overview. Factory settings are shown in **bold print**. Further menu items appear when options are enabled. See "Options," p. 50.

### Menu selection "pH configuration" – part 1

Language	<b>Deutsch</b>   English   Español   Italiano   Français   Português   中文
Auto-off	<b>Off</b>   5 min   10 min   30 min   60 min
Temperature	°C   °F
Right softkey	Start/Stop logger   <b>Hold value</b>   Print
+ pH sensor <sup>1)</sup>	
Display format	<b>0.00 pH</b>   0.000 pH
Wear	<b>On</b>   Off
Count autoclaving cycle <sup>2)</sup>	Yes   <b>No</b>
Devalue sensor <sup>2)</sup>	Yes   <b>No</b>
+ Calibration <sup>1)</sup>	
Calibration timer	<b>Off</b>   On
Monitoring	<b>Off</b>   On <sup>3)</sup>
Interval	00 ... 99 days
Calibration mode	<b>Calimatic</b>   Manual   Data entry   ORP <sup>2)</sup>   ISFET zero <sup>4)</sup>
Cal points	<b>Auto</b>   1-point   2-point   3-point

Navigation arrows: Up/Down (vertical), Left/Right (horizontal), and Enter (diagonal) are shown between the menu items and their corresponding settings.

- 1) "+" indicates that sub-items can be brought up by pressing the **enter** key.
- 2) with pH/ORP combo sensor
- 3) If the calibration timer has expired, measured values are no longer displayed.
- 4) With ISFET sensor

## Menu selection “pH configuration” – part 2

	Buffer set	Mettler-Toledo	2.00/4.01/7.00/9.21
		<b>Knick CaliMat</b>	2.00/4.00/7.00/9.00/12.00
		Ciba	2.06/4.00/7.00/10.00
		NIST Technical	1.68/4.00/7.00/10.01/12.46
		NIST Standard	1.679/4.006/6.865/9.180
		Hach	4.01/7.00/10.01/12.00
		WTW	2.00/4.01/7.00/10.00
		Hamilton	2.00/4.01/7.00/10.01/12.00
		Reagecon	2.00/4.00/7.00/9.00/12.00
		DIN 19267	1.09/4.65/6.79/9.23/12.75
		Metrohm	4.00/7.00/9.00
		User buffer 1 <sup>2)</sup>	
		<b>Off</b>   On	
		<b>Off</b>   On	
	MemoLog		
TAG			
+ Time/Date <sup>1)</sup>			
Time format	<b>24 h</b>   12 h		
Date format	<b>dd.mm.yyyy</b>   yyyy-mm-dd   dd.mm.yyyy   mm/dd/yyyy		
Time	hh:mm:ss		
Date	as per date format		
+ Display <sup>1)</sup>			
Appearance	<b>Modern</b>   Retro		
Lighting	<b>Permanent</b>   60 min   30 min   10 min   5 min   1 min   30 sec		
Brightness	<b>Bright</b>   Standard   Dim		
+ Data logger <sup>1)</sup> (for menu, see page 41)			
+ Printer			
Driver	<b>Auto</b>   HP PCL   Epson   Samsung   IBM		
Paper	<b>A4</b>   Small		
+ Options <sup>1)</sup>	001 SOP	Enter TAN to enable option (see page 50)	
	002 Temp.cal		
	003 Multichannel		
Factory setting	<b>Yes</b>   <b>No</b>		
	<b>Note:</b> Resetting the device to its factory settings will delete all logger data.		

1) “+” indicates that sub-items can be brought up by pressing the **enter** key.

2) Parameter can be configured using the Paraly SW 112 software.

## ORP

## ORP Configuration

- 1) From within measuring mode, press the **Menu** softkey.
- 2) Select "Configuration" and press **enter** to confirm.
- 3) Adjust the settings as required.


The following table gives you an overview. Factory settings are shown in **bold print**. Further menu items appear when options are enabled. See "Options," p. 50.

## Menu selection "ORP configuration" – part 1

Language	<b>Deutsch</b>   English   Español   Italiano   Français   Português   中文
Auto-off	<b>Off</b>   5 min   10 min   30 min   60 min
Temperature	°C   °F
Right softkey	Start/Stop logger   <b>Hold value</b>   Print
+ Calibration <sup>1)</sup>	
MemoLog	<b>Off</b>   On
TAG	<b>Off</b>   On
+ Time/Date <sup>1)</sup>	
Time format	<b>24 h</b>   12 h
Date format	<b>dd.mm.yyyy</b>   yyyy-mm-dd   dd.mm.yyyy   mm/dd/yyyy
Time	hh:mm:ss
Date	as per date format
+ Display <sup>1)</sup>	
Appearance	<b>Modern</b>   Retro
Lighting	<b>Permanent</b>   60 min   30 min   10 min   5 min   1 min   30 sec
Brightness	<b>Bright</b>   Standard   Dim

1) "+" indicates that sub-items can be brought up by pressing the **enter** key.

## Menu selection “ORP configuration” – part 2

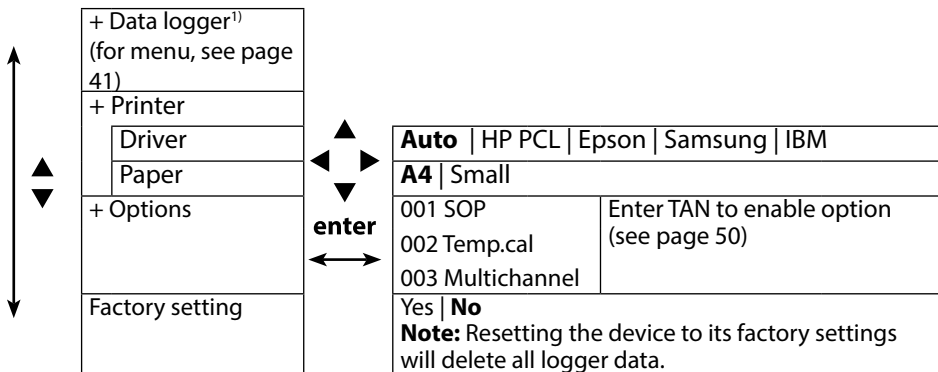

1) “+” indicates that sub-items can be brought up by pressing the **enter** key.


## Cond

## Conductivity Configuration

- 1) From within measuring mode, press the **Menu** softkey.
- 2) Select "Configuration" and press **enter** to confirm.
- 3) Adjust the settings as required.


The following table gives you an overview. Factory settings are shown in **bold print**. Further menu items appear when options are enabled. See "Options," p. 50.

### Menu selection "Conductivity configuration" – part 1

	Language	<b>Deutsch</b>   English   Español   Italiano   Français   Português   中文
	Auto-off	<b>Off</b>   5 min   10 min   30 min   60 min
	Temperature	°C   °F
	Right softkey	Start/Stop logger   <b>Hold value</b>   Print
	Conductivity	<b>S/cm</b>   S/m
	+ Cond sensor <sup>1)</sup>	
	Range selection	<b>Auto</b>   0.000 µS/cm   00.00 µS/cm   000.0 µS/cm   0000 µS/cm   00.00 mS/cm   000.0 mS/cm   0000 mS/cm
	Calculation	<b>Off</b>   MΩ cm   TC   SAL   TDS   % by wt
	TC comp.	TC: <b>Linear</b>   NLF   NaCl   HCl   NH3   NaOH
	TC of solution	TC: 0 ... 20.0 %/K   <b>2.1 %/K</b>
	Ref. temp	TC: 0 ... 100.0 °C   <b>25 °C</b>   32 ... 212 °F   <b>77 °F</b>
	TDS factor	TDS: 0 ... 9.99   <b>1.00</b>
	Solution	% by wt <b>NaCl</b>   HCl   NaOH   H2SO4   HNO3

1) "+" indicates that sub-items can be brought up by pressing the **enter** key.

## Menu selection "Conductivity configuration" – part 2

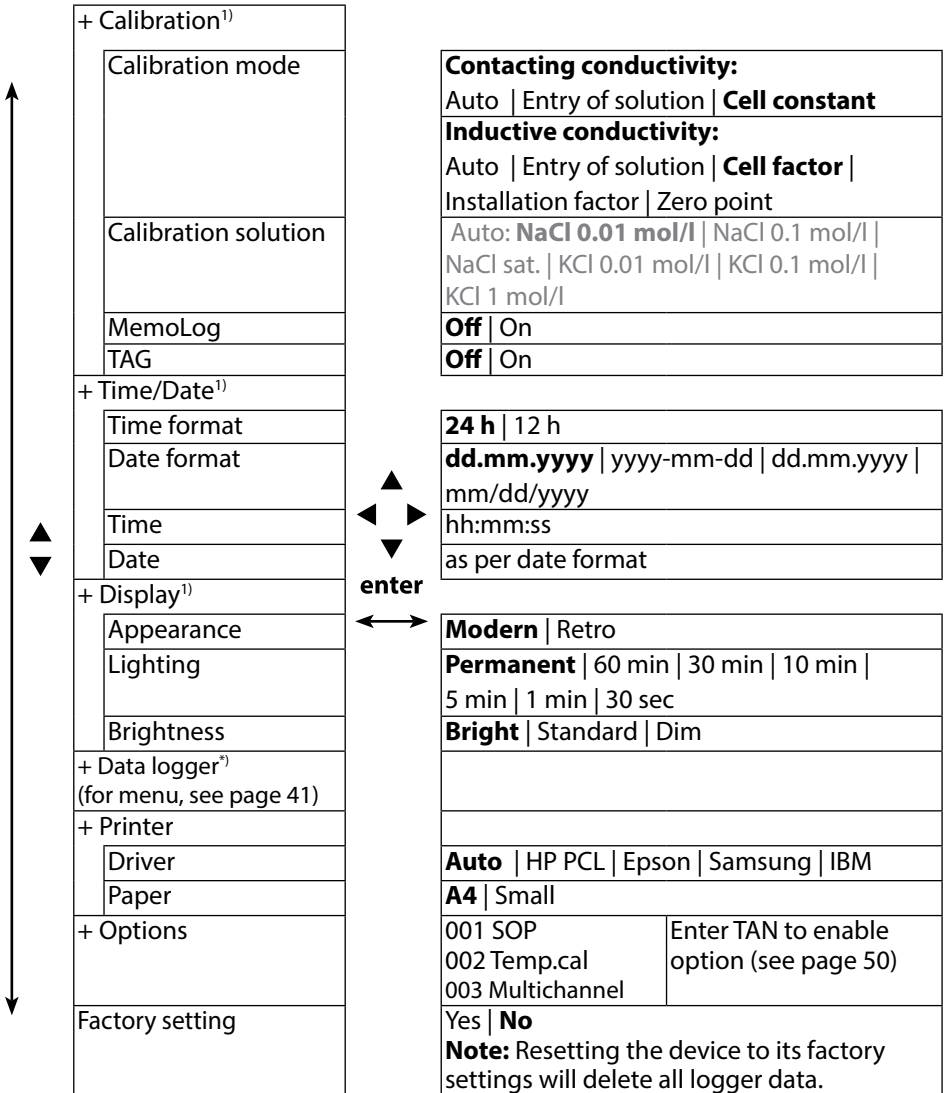

1) "+" indicates that sub-items can be brought up by pressing the **enter** key.

## Oxy

## Oxygen Configuration

- 1) From within measuring mode, press the **Menu** softkey.
- 2) Select "Configuration" and press **enter** to confirm.
- 3) Adjust the settings as required.

The following table gives you an overview. Factory settings are shown in **bold print**. Further menu items appear when options are enabled. See "Options," p. 50.

## Menu selection "Oxygen configuration" – part 1

Language	<b>Deutsch</b>   English   Español   Italiano   Français   Português   中文
Auto-off	<b>Off</b>   5 min   10 min   30 min   60 min
Temperature	°C   °F
Right softkey	Start/Stop logger   <b>Hold value</b>   Print
+ Oxy sensor <sup>1)</sup>	
Medium	<b>Liquid</b>   Gas
Relative Humidity	Gas: 0.0 ... <b>100.0</b> %
Display	<b>Saturation</b>   Concentration   Partial pressure
Salinity	<b>0</b> ... 45.0 g/kg
Pressure corr. <sup>2)</sup>	<b>Air pressure</b>   Manual
Pressure	Manual: 0 ... 9999 mbar   <b>1013 mbar</b>
Wear	<b>On</b>   Off
+ Calibration <sup>*)</sup>	
Calibration mode	<b>In air</b>   Zero point   Data entry
Calibration timer	<b>Off</b>   On
Monitoring	<b>Off</b>   On <sup>3)</sup>
Interval	0 ... 99 days
MemoLog	<b>Off</b>   On
TAG	<b>Off</b>   On


1) "+" indicates that sub-items can be brought up by pressing the **enter** key.

2) The device has an internal barometer.

3) If the calibration timer has expired, measured values are no longer displayed.



## Menu selection "Oxygen configuration" – part 2

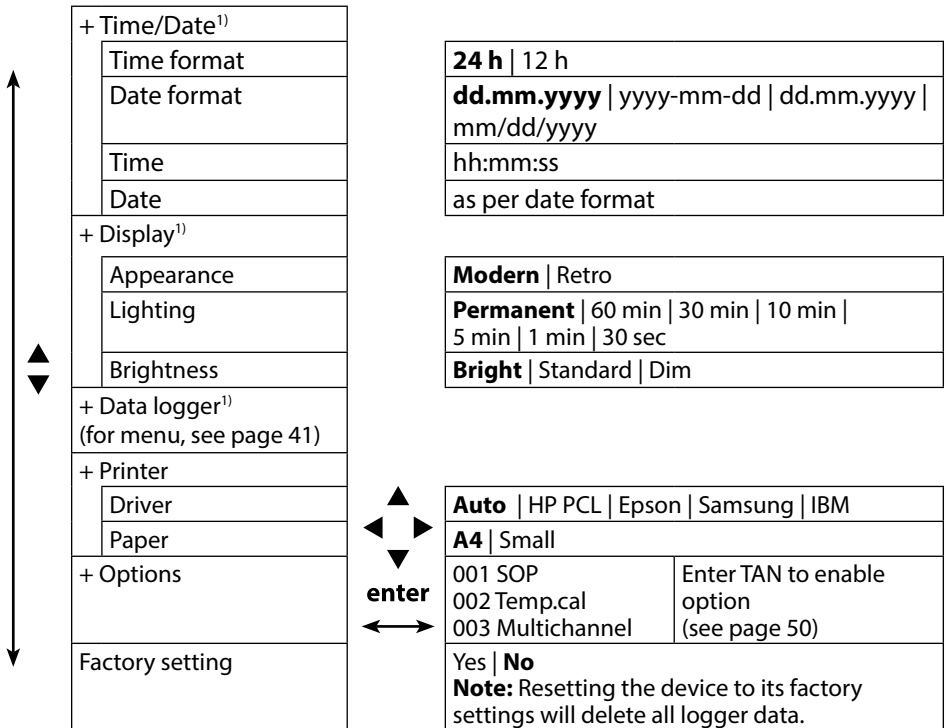

1) "+" indicates that sub-items can be brought up by pressing the **enter** key.

## pH

## pH Calibration

- 1) From within measuring mode, press the **Menu** softkey.
- 2) Select "Calibration" and confirm by pressing **enter**.
- 3) Select the desired "Calibration mode" and confirm by pressing **enter**.
- 4) Continue with the **Start** softkey.
- 5) The "TAG" menu allows the sensor TAG to be edited using the arrow keys and **enter**.

To do so, set "TAG" to **On** in the Parameter Setting menu (default setting: **Off**).

- 6) Perform the selected calibration as described on the following pages.

Follow the instructions on the display.

**Note:** Calibration is not possible when the device is connected via USB with the Paraly SW112 PC software.

## Calimatic Calibration

(Automatic calibration with specification of the buffer solution used)

- 1) Select the number of calibration points and the buffer set as shown in the table below and press the **Start** softkey.

Calibration points	Auto   1-point   2-point   3-point	
Buffer set	Mettler-Toledo	2.00/4.01/7.00/9.21
	<b>Knick CaliMat</b>	2.00/4.00/7.00/9.00/12.00
	Ciba	2.06/4.00/7.00/10.00
	NIST Technical	1.68/4.00/7.00/10.01/12.46
	NIST Standard	1.679/4.006/6.865/9.180
	Hach	4.01/7.00/10.01/12.00
	WTW	2.00/4.01/7.00/10.00
	Hamilton	2.00/4.01/7.00/10.01/12.00
	Reagecon	2.00/4.00/7.00/9.00/12.00
	DIN 19267	1.09/4.65/6.79/9.23/12.75
	Metrohm	4.00/7.00/9.00
	User buffer 1	Configurable in Paraly SW 112 PC software

- 2) Immerse the sensor in the **1st/2nd/3rd** buffer solution and press **Continue** (repeat this step for each calibration point).
- 3) On completion, the calibration data will be displayed.  
You can **Apply** or **Discard** these values.

**Note:** To abort calibration, you can press **meas** at any time.

## Manual Calibration

**(Calibration with manual specification of the number of calibration points and the buffer solution)**

- 1) Select the number of calibration points and press the **Start** softkey.
- 2) Adjust the temperature-corrected value (see buffer table) for the **1st/2nd/3rd** buffer solution and press **Continue** (repeat this step for each calibration point).
- 3) On completion, the calibration data will be displayed.  
You can **Apply** or **Discard** these values.

## Data Entry Calibration

**(Calibration by entering known sensor values)**

- 1) Press the **Start** softkey.
- 2) Enter the known sensor values for zero and slope.
- 3) You can then **Apply** these values or **Cancel** the calibration.

## Calibration Timer Monitoring

Activating calibration timer monitoring can help to improve the quality of the measurement (for configuration, see page 18). When the calibration timer has expired, no further measurements are possible. The measurement display is frozen and replaced by dashes, and not released until the sensor is calibrated again.

**Note:** To abort calibration, you can press **meas** at any time.

pH

ORP

## pH/ORP Combo Sensor Calibration

The pH/ORP combo sensor can be calibrated as a pH sensor and/or as an ORP sensor.

### pH Calibration

Follow the instructions given for pH calibration, p. 26.

### ORP Calibration

Follow the instructions given for ORP calibration, p. 28.

## ORP Calibration

- 1) From within measuring mode, press the **Menu** softkey.
- 2) Select "Calibration" and confirm by pressing **enter**.
- 3) Select the desired "Calibration mode" and confirm by pressing **enter**.
- 4) The "TAG" menu allows the sensor TAG to be edited using the arrow keys and **enter**. To do so, set "TAG" to **On** in the Parameter Setting menu (default setting: **Off**).
- 5) Enter the temperature-corrected setpoint of the calibration solution.
- 6) Immerse the sensor in the calibration solution and wait until the measured value is stable.
- 7) **Apply** or **Discard** the ORP setpoint.

**Note:** Calibration is not possible when the device is connected via USB with the Paraly SW112 PC software.

**Note:** To abort calibration, you can press **meas** at any time.

## ISFET Calibration

- 1) From within measuring mode, press the **Menu** softkey.
- 2) Select "Calibration" and confirm by pressing **enter**.
- 3) Select the desired "Calibration mode" and confirm by pressing **enter**.
- 4) The "TAG" menu allows the sensor TAG to be edited using the arrow keys and **enter**. To do so, set "TAG" to **On** in the Parameter Setting menu (default setting: **Off**).
- 5) Perform the selected calibration as described on the following pages. Follow the instructions on the display.

**Note:** Calibration is not possible when the device is connected via USB with the Paraly SW112 PC software.

## Calibrating the ISFET Zero (Operating Point)

- 1) Select the "ISFET zero" calibration mode for setting the operating point for the first sensor calibration.

Calibration mode	<b>Calimatic</b>
	Manual
	Data entry
	ISFET zero (operating point)

- 2) Press the **Start** softkey.
- 3) Adjust the buffer value if required: Default pH 7.00
- 4) Press the **Start** softkey.
- 5) Finally, you can **Apply** or **Discard** the calibration value for the operating point. When you apply the calibration value, the operating point will be stored in the device, but not in the sensor!  
Keep the sensor connected to the Portavo while performing the next calibration step. The operating point will be taken into account for the following calibration.

## Calimatic/Manual/Data Entry Calibration

Follow the instructions given for pH calibration, p. 26

If you disconnect the sensor before performing the calibration (e.g., Calimatic), you must set the operating point again as described above.

**Note:** To abort calibration, you can press **meas** at any time.

## Cond

## Conductivity Calibration

- 1) From within measuring mode, press the **Menu** softkey.
- 2) Select "Calibration" and confirm by pressing **enter**.
- 3) Select the desired "Calibration mode" and confirm by pressing **enter**.
- 4) The "TAG" menu allows the sensor TAG to be edited using the arrow keys and **enter**. To do so, set "TAG" to **On** in the configuration menu (default setting: **Off**).
- 5) Perform the selected calibration as described on the following pages.  
Follow the instructions on the display.

**Note:** Calibration is not possible when the device is connected via USB with the Paraly SW112 PC software.

## Auto Calibration

(Automatic calibration with specification of the calibration solution used)

### Important notes:

- Make sure that the values of the calibration solutions used correspond exactly to those specified in this manual.  
If not, the resulting cell constant will be incorrect.
- When calibrating in a liquid, make sure that the sensor and the calibration solution have the same temperature. Only this ensures that the cell constant is determined correctly.

- 1) Select the calibration solution:
  - **NaCl 0.01 mol/l**
  - NaCl 0.1 mol/l
  - NaCl sat.
  - KCl 0.01 mol/l
  - KCl 0.1 mol/l
  - KCl 1 mol/l
- 2) Press the **Start** softkey.
- 3) Immerse the sensor in the solution and press **Continue**.
- 4) On completion, the calibration data record will be displayed.  
You can **Apply** or **Discard** these values.

**Note:** To abort calibration, you can press **meas** at any time.

## “Entry of Solution” Calibration

(Calibration by entering the conductivity with display of the cell constant)

- 1) Press the **Start** softkey.
- 2) Immerse the sensor in the solution.
- 3) Enter the temperature-corrected conductivity value and press **enter**.
- 4) You can then **Apply** these values or **Cancel** the calibration.

## Cell Constant / Cell Factor Calibration

(Calibration by entering the cell constant (cell factor) with display of conductivity)

- 1) Press the **Start** softkey.
- 2) Immerse the sensor in the solution.
- 3) Modify the value of the cell factor (cell constant) until the temperature-corrected conductivity value is reached. Then press **enter**.
- 4) Finally, you can **Apply** these values or **Cancel** the calibration.

Contacting Conductivity Sensor (Conductive)	Cell Constant
SE215 MS	1.00/cm ± 2 %
Toroidal Conductivity Sensor (Inductive)	Cell Factor
SE680 MS	6.4/cm

## Installation Factor Calibration

- 1) Make sure that the sensor is in normal mounting position in the medium.
- 2) Press the **Start** softkey.
- 3) Modify the installation factor until the correct conductivity value is displayed (reference measurement). Then press **enter**.
- 4) You can then **Apply** these values or **Cancel** the calibration.

## Zero Calibration

- 1) Make sure that the sensor is outside the medium (in air).
- 2) Press the **Start** softkey.
- 3) Finally, you can **Apply** these values or **Cancel** the calibration.

**Note:** To abort calibration, you can press **meas** at any time.

## Oxy

## Oxygen Calibration

- 1) From within measuring mode, press the **Menu** softkey.
- 2) Select "Calibration" and confirm by pressing **enter**.
- 3) Select the desired "Calibration mode" and confirm by pressing **enter**.
- 4) Select "Membrane module replacement" if you wish to save a change of membrane or electrolyte in the connected sensor. The digital optical oxygen sensor automatically recognizes replacement of the membrane body.
- 5) The "TAG" menu allows the sensor TAG to be edited using the arrow keys and **enter**. To do so, set "TAG" to **On** in the configuration menu (default setting: **Off**).
- 6) Perform the selected calibration as described on the following pages.  
Follow the instructions on the display.

**Note:** Calibration is not possible when the device is connected via USB with the Paraly SW112 PC software.

## Calibration in Air

### (Calibrating the slope in air)

- 1) Place sensor in air and wait for a stable measured value.
- 2) Press the **Start** softkey.
- 3) Set the correct value for "Relative humidity". Then press **Continue**.  
Calibration is performed.
- 4) On completion, you can **Apply** or **Discard** these values.

**Note:** To abort calibration, you can press **meas** at any time.



## Zero Calibration

**(Zero calibration with oxygen-free medium, e.g., nitrogen 5.0)**

- 1) Place sensor in oxygen-free medium and wait for a stable measured value.
- 2) Press the **Start** softkey. Calibration is performed.
- 3) You can then **Apply** these values or **Cancel** the calibration.

## Data Entry Calibration

**(Calibration by entering known sensor values)**

- 1) Press the **Start** softkey.
- 2) Adjust the known sensor values for zero and slope.
- 3) You can then **Apply** these values or **Cancel** the calibration.

## Calibration Timer Monitoring

Activating calibration timer monitoring can help to improve the quality of the measurement (for configuration, see page 24). When the calibration timer has expired, no further measurements are possible. The measurement display is frozen and replaced by dashes, and not released until the sensor is calibrated again.

**Note:** To abort calibration, you can press **meas** at any time.

pH

ORP

Oxy

Cond

Once you have completed all preparations, you can start with the actual measurement.

- 1) Connect the desired sensor to the meter. Some sensors require a special preparation. Information on this can be found in the sensor's User Manual.
- 2) Switch the meter on using the **on/off** or **meas** key.
- 3) Depending on the measurement method and the sensor used, immerse the sensing part of the sensor in the medium to be measured.
- 4) Watch the display and wait for the reading to stabilize.

**Note:** Measurement can also be controlled using the Paraly SW112 PC software.

### Toggling the Measurement Display

During measurement, you can toggle between display of primary/secondary measured values and clock by pressing **meas**.

pH

ORP

Oxy

Cond

You can print out the currently measured values and the calibration record. Via the micro USB port, you can connect the Portavo 908 to a suitable printer. To do so, use the included USB adapter (A female to B male). The following printer protocols are supported: HP-PCL, Epson, Samsung, and IBM.

### Required Settings in the “Configuration” Menu

(depending on the measured variable; pH: p. 18, Cond: p. 22, Oxy: p. 24)

- Assign the “Print” function to the right softkey.
- From the “Printer” submenu, select the driver for your printer and the paper size:

+ Printer	
Driver	<b>Auto</b>   HP PCL   Epson   Samsung   IBM
Paper	<b>A4</b>   Small

### Printing Currently Measured Values

- 1) Connect a printer to the Portavo via the micro USB port and switch it on. To do so, use the included USB adapter (A female to B male).
- 2) Switch the meter on using the **on/off** or **meas** key.
- 3) Press the right **Print** softkey.  
The currently measured values will be printed.

**Note:**

A4 printers do not eject the paper immediately.

The printer collects several values before it prints the page. If you want to eject the page before the print job is finished, you can press and hold the **Print** softkey (for approx. 2 seconds).

You will receive a printout of the currently measured values with date and time stamp.

pH

ORP

Oxy

Cond

## Printing a Calibration Record

- 1) Connect a printer to the Portavo via the micro USB port and switch it on.  
To do so, use the included USB adapter (A female to B male).
- 2) Switch the meter on using the **on/off** or **meas** key.
- 3) Open the "Information" menu.
- 4) Select "Calibration record".
- 5) Press the right **Print** softkey (see previous page for configuration).

You will receive a printout of the calibration record with date and time stamp.

Calibration record:

- Date and time
- Device information (manufacturer, serial number, SW version)
- Sensor information (sensor type, manufacturer, order no., serial no., wear data, etc.)
- Calibration data (zero point, slope, temperature, calibration solutions, etc.)

pH

ORP

Oxy

Cond

## The Data Logger

The meter provides a data logger. **Prior to use**, it must be configured and then activated. You can choose from the following logger types:


- Shot (manual logging by pressing the **Save value** softkey)
- Interval (time-controlled logging at a fixed interval)
- Difference (signal-controlled logging of measured variable and temperature)
- Intv+Diff (combined time- and signal-controlled logging)
- Limit value (combined time- and threshold-controlled logging)

The data logger records up to 10,000 entries, which can be assigned to different points of measurement (TAGs) and annotations. The following data will be recorded: meas. point, note, sensor ID, serial number of sensor (Memosens), primary value, temperature, time stamp, device status.

**It is always the currently selected process variable that is recorded.**

Option 001 SOP can be used to set up an access lock for the data logger, which in the absence of a PIN code allows only logger data to be displayed (see p. 50).

### Display: Icons related to the data logger

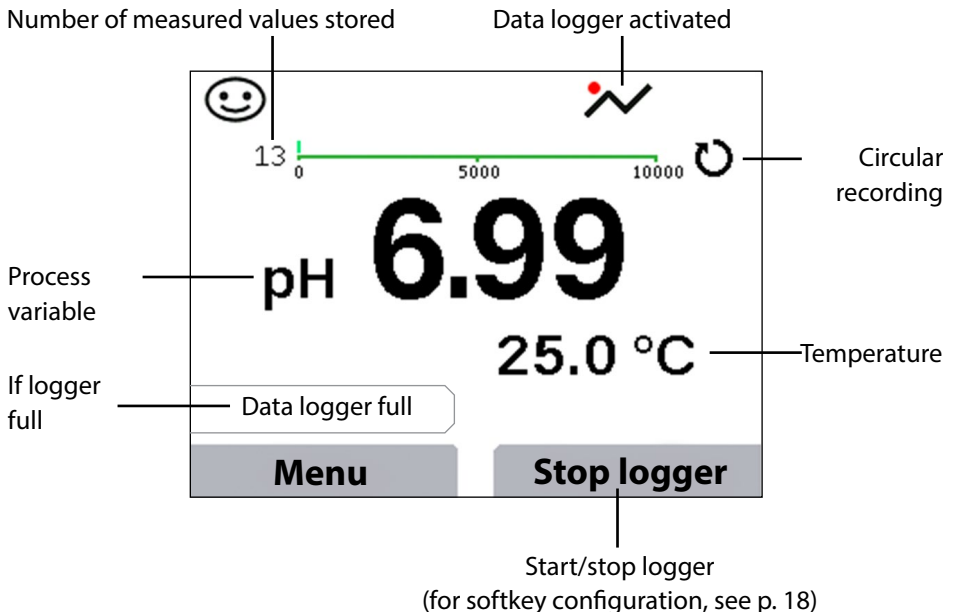

pH

ORP

Oxy

Cond


## Operating Modes of the Data Logger (Logger Type)

### Shot

In this mode, a measured value is recorded each time the **Save value** softkey is pressed. In measuring mode (**meas**), it is always possible to hold a value and then save it.


### Interval (time-controlled)

In "Interval" mode, the data is cyclically recorded.

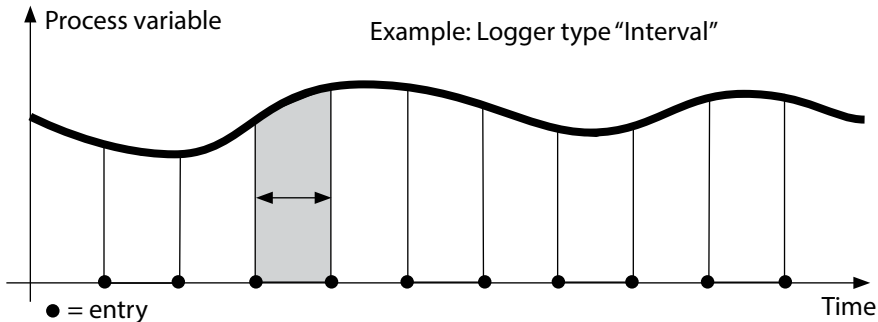

### Difference

When the delta range (process variable and/or temperature) related to the last entry is exceeded, a new entry is created and the delta range is displaced upwards or downwards by the delta value. The first entry is automatically created when the data logger is started.

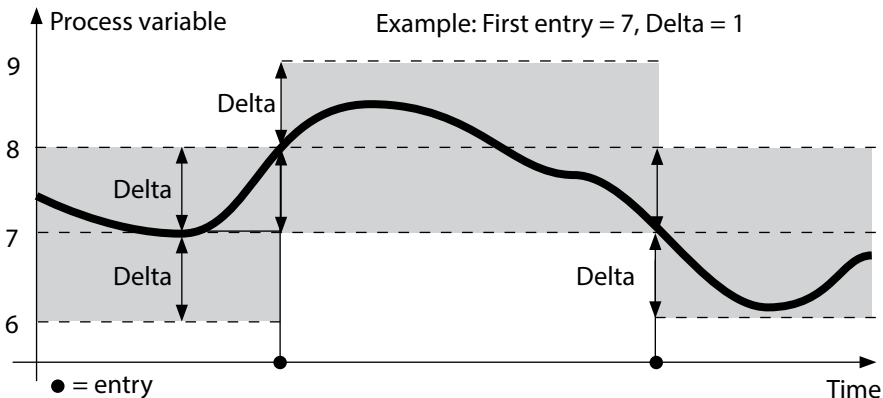

pH


ORP

Oxy

Cond


### Interval and difference (combined)

When the delta range related to the last DIFF entry is exceeded, a new entry is created (example: entry **A**) and the delta range is displaced upwards or downwards by the delta value. As long as the measured value remains within the delta range, logging is performed at the preset interval. The first DIFF entry is automatically created when the data logger is started.

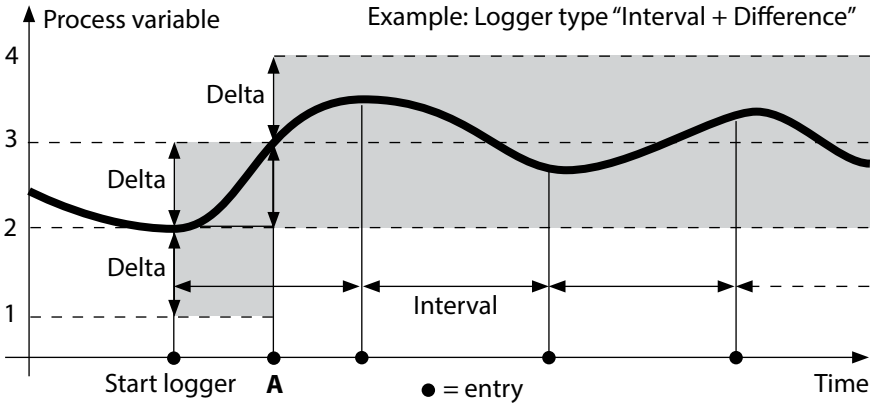

### Limit value (combined)

When one of the two limit values (Min/Max) is exceeded, the data is logged as defined by the "event interval". Additionally, the last ten measured values before an event are recorded (pre-trigger). As long as the measured value remains within the limits, logging is performed at the preset "basic interval".

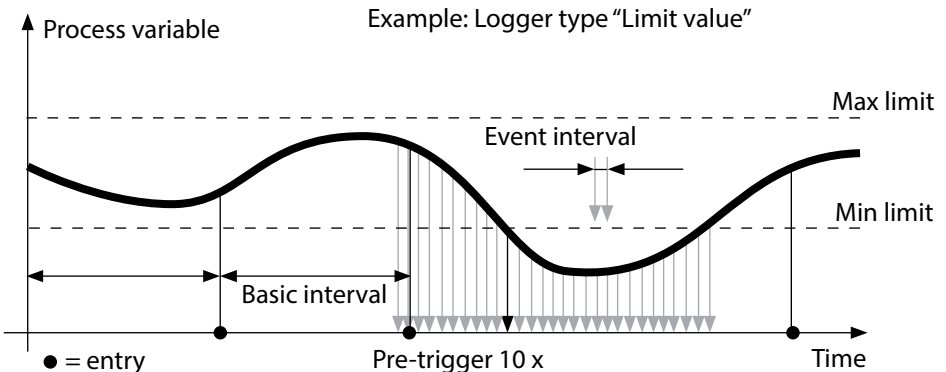

pH

ORP

Oxy

Cond

## Configuring the Data Logger

Prerequisite: Data logger is stopped.

The “Data logger” menu shows the number of occupied entries as well as the number of free entries. Configuration can also be done by going to “Data logger” in the “Configuration” menu.

1. Press **Menu** softkey.
2. Select “Data logger” and confirm by pressing **enter**.
3. Select “Configure data logger” and confirm by pressing **enter**.
4. Configure data logger as required (see table).
5. When you have completed the configuration, you can start the data logger.

## Increasing the Battery Life

To increase the battery life for logger operation, the time for the display lighting selected in the configuration should be as short as possible.

**Note:** When the selected time has expired, display and backlighting switch off automatically. They can be switched on again by pressing any key.



pH

ORP

Oxy

Cond

## Configuring the data logger (default in bold print)

Meas.point	<b>None</b>		
Note	<b>None</b>		
Record	<b>Non-circular</b>		
	Circular		
Logger type	Shot		
	<b>Interval</b>	Interval	00:00:01...12:59:59   <b>00:02:00</b>
	Difference	1st difference <sup>*)</sup>	<b>On</b> Off
		Delta pH	pH 0.0...16.0   <b>pH 1.0</b>
		Delta mV	0 ... 2000 mV   <b>1 mV</b>
		Delta cond	0 ... 2000 mS/cm   <b>1,000 µS/cm</b>
		Delta conc	0 ... 9.99 %   <b>1.00 %</b>
		Delta MΩcm	0 ... 9,999 MΩcm   <b>1,000 MΩcm</b>
		Delta salinity	0.0 ... 45.0 g/kg   <b>1.0 g/kg</b>
		Delta TDS	0 ... 5000 mg/l   <b>1 mg/l</b>
		Delta saturation	0 ... 200 %Air   <b>1 %Air</b>
		Delta conc	0 ... 20.0 mg/l   <b>1.0 mg/l</b>
		Delta %	0,001 ... 9,999 %   <b>1,000 %</b>
		Delta mbar	0.0 ... 999.99 mbar   <b>1.00 mbar</b>
		2nd difference	On <b>Off</b>
		Delta °C	0...99.9 °C   <b>1.0 °C</b>
Delta °F		0...450.0 °F   <b>1.0 °F</b>	
Intv+Diff	Interval	see logger type: interval	
	Difference	see logger type: difference	
Limit	Interval	Basis 00:00:01...12:59:59   <b>00:01:00</b>	
		Event <b>00:00:01</b> ...12:59:59	
	Limit values	Min/Max corresponding to permissible range (see Specifications)	

\*) Process variables dependent on connected sensor and configuration,  
see page 18

pH

ORP

Oxy

Cond

## Starting/Stopping the Data Logger

With the data logger activated, automatic switch-off is disabled. Every time the meter has been switched off, the data logger must be restarted.

Depending on the assignment of the right softkey (see configuration, page 18), you can start/stop the data logger as follows:

Right Softkey	
Start/stop logger	1. Press the right softkey <b>Start logger / Stop logger</b> .
Hold value	1. Press the <b>Menu</b> softkey. 2. Select "Data logger" using the arrows and confirm by pressing <b>enter</b> . 3. Press the <b>Start</b> or <b>Stop</b> softkey.

## Viewing the Logger Data

In the "Data logger" menu you can view the recorded entries either individually or as a curve (see examples).

You can also use the Paraly SW 112 PC software to manage the data logger.

1. Press the **Menu** softkey.
2. Select "Data logger" using the arrows and confirm by pressing **enter**.
3. Select "View logger data" using the arrow keys and confirm by pressing **enter**.
4. Select filter ("Meas.point" or "Time + Meas.point" or "All values").
5. Select the parameter corresponding to the sensor.
6. Press the **Menu** softkey.
7. Select the desired entries using the arrow (see example 1).
8. For display as curve characteristic, press the **Graphic** softkey.

You can use the arrows to navigate between entries (see example 2).

## Delete Logger Data

To delete the recorded entries, proceed as follows:

1. Press the **Menu** softkey.
2. Select "Data logger" using the arrows and confirm by pressing **enter**.
3. Select "Delete logger data" using the arrow keys and confirm by pressing **enter**.
4. Select deletion mode: "Complete", "Data", "Meas.point" or "Filter" (you can filter for measuring point, parameter or time).
5. Press the **Delete** softkey. The data is deleted according to the configuration.
6. Press the **Back** softkey to return to menu selection.



Example 1: Viewing the logger data

The screenshot shows a green header with 'Data Logger'. Below it, 'pH 7.000' and '25.0 °C' are displayed. A smiley face icon is followed by '15.08.2012 10:45:36', which is circled in red. Below this is a table with 'Meas.point' (ABC), 'Annotation', 'Sensor' (Analog), and '1/3'. At the bottom are 'Back' and 'Graphic' buttons. Red arrows point from text labels to these elements: 'Primary measured value' to pH, 'Measured temperature' to 25.0 °C, 'Date and time' to the circled date/time, and 'Scroll using arrow keys' to 1/3.



Example 2: Curve characteristic

The screenshot shows a green header with 'Data Logger'. Below it is a graph with two lines: a red line for 'pH' and a blue line for '°C'. The y-axis ranges from 6.50 to 7.50 on the left and 24.3 to 25.8 on the right. A red oval highlights a point on the graph, with an arrow pointing to it from the text 'Select entry using arrows.'. Below the graph, 'Entry 2 of 3' is shown, with '2/3' circled in red. Below that is a table with 'pH 7.21', '25.0 °C', '24.08.2012', and '17:12:50'. At the bottom are 'Back' and 'Graphic' buttons. Red arrows point from text labels to these elements: 'Entry 2 of 3' to 2/3, 'Select entry using arrows.' to the graph point, 'Measured values' to the pH and temperature values, 'Date' to the date, and 'Time' to the time.

pH

ORP

Oxy

Cond

The Paraly SW112 PC software supplements the Portavo series. It allows convenient management of the data that has been acquired by the meters as well as simple and clear configuration of the meters. Paraly SW112 automatically connects to the Portavo as soon as the meter is connected to the computer's USB port.

The Paraly SW112 PC software stands out by the following features:

- Intuitive Windows user interface
- Easy configuration and management of several meters
- Display of device and sensor information
- Configuration of individual buffer sets
- Convenient management and evaluation of the data logger
- Export function for Microsoft Excel
- Print function
- Device firmware update

**Note:** The Paraly SW112 PC software, incl. a detailed User Manual, can be downloaded from [www.knick.de](http://www.knick.de).

To access the software's full range of functions, always make sure you are using the latest version.



pH

ORP

Oxy

Cond

Error and status messages appear as plain text on the display. More detailed help texts can be displayed by pressing **enter** and **Help**. Information on the sensor condition is indicated by the “Sensoface” icon (happy, neutral, sad), which may be accompanied by an info text.

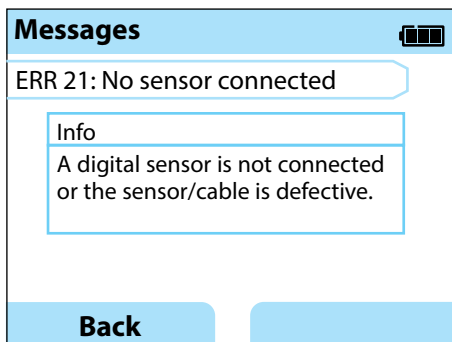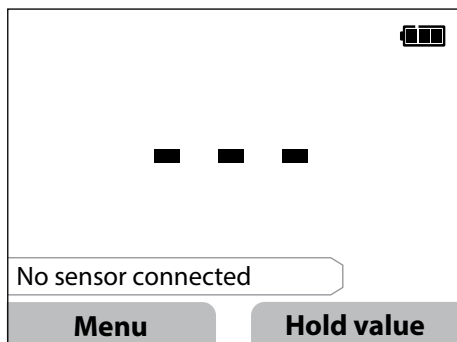

Example of an error message: Press **enter** and **Help** to access the help text.

Help text for error 21

## “Sensoface” Messages

The “Sensoface” icon provides information on the sensor condition:

### Sensoface Meaning



Sensor is OK



Calibrate the sensor soon



Calibrate or replace the sensor

Even with a sad Sensoface, the measuring device is still able to determine the process variable.



After a calibration, the corresponding Sensoface icon (happy, neutral, sad) is shown together with the calibration data.

Otherwise, Sensoface is only visible in measuring mode.



## Cond

## Sensoface Criteria


## Conductivity (contacting)

Sensoface	Cell constant
	0.5x nom. cell constant ... 2x nom. cell constant
	< 0.5x nom. cell constant or > 2x nom. cell constant

## Conductivity (inductive)

Sensoface	Cell Factor	Zero point
	0.5x nom. cell factor ... 2x nom. cell factor	-0.25 mS ... 0.25 mS
	< 0.5x nom. cell factor or > 2x nom. cell factor	< -0.25 mS or > 0.25 mS

## Oxygen

Sensoface	Slope
	<b>Standard sensor (SE706...)</b>
	-110 nA ... -30 nA
	< -110 nA or > -30 nA

Sensoface	Zero point
	<b>Standard sensor (SE706...)</b>
	-1 nA ... 1 nA
	< -1 nA or > 1 nA

**Note:** The worsening of a Sensoface criterion leads to the devaluation of the Sensoface indicator (Smiley gets "sad"). An improvement of the Sensoface indicator can only take place after calibration or removal of the sensor defect.

pH

ORP

Oxy

Cond


## Info and Help Texts

When an error or status message appears on the screen, proceed as follows to view the corresponding info or help text:

- 1) Press **enter**.
- 2) Press the **Help** softkey.
- 3) The help text will be displayed. In most cases, you can remedy the cause of the error by yourself. Please refer to the following table for possible remedies.

Info	Message
Info 01	Cal timer expired
Info 02	Sensor wear
Info 03	Bad glass impedance
Info 05	Zero/slope
Info 06	Response time too long
Info 07	Operating point (ISFET)
Info 08	Leakage current (ISFET)
Info 09	ORP offset
Info 10	Polarization

## Error Messages

Error	Message	Remedy
 Blinking	Replace the batteries	Replace the batteries.
ERR 1	Primary variable range	Check whether the measurement conditions correspond to the adjusted measuring range.
ERR 2	ORP range	
ERR 3	Temperature range	
ERR 4	Zero point	Thoroughly rinse the sensor and recalibrate. If this does not help, replace the sensor.
ERR 5	Slope	
ERR 6	Cell constant too high/ too low	Enter nominal cell constant or calibrate the sensor using a known solution.



pH

ORP

Oxy

Cond

<b>Error</b>	<b>Message</b>	<b>Remedy</b>
ERR 7	Air pressure range	Check if the opening for the pressure sensor located on the back of the device is blocked.
ERR 8	Identical buffers!	Use a buffer solution with a different nominal value before starting the next calibration step.
ERR 10	Buffers interchanged!	Repeat calibration.
ERR 11	Unstable value (Drift too high)	Leave the sensor in the liquid until the measured value is stable. If this does not help, replace the sensor.
ERR 14	Time and date invalid	Set the date and time.
ERR 18	System error	Restart, reset to factory settings, configure, and calibrate. If the error occurs again, contact the Service team.
ERR 19	Factory settings error	Data error. Contact the Service team.
ERR 21	No sensor connected	Possible causes: Sensor defective/devaluated or no sensor connected: Connect an operational Memosens sensor. Two sensors connected in 1-channel mode: Select 2-channel mode.
ERR 25	Buffer difference	Re-enter the buffer table (Paraly SW 112).
ERR 30	Data logger full	Clear the logger completely or partially.
ERR 31	MemoLog full	Clear the MemoLog completely or partially.

pH

Redox

Oxy

Cond

## Option 001 SOP (Standard Operating Procedure)

### SOP Cal Calibration Method

Here, you specify which buffers are to be used in which sequence.

You can combine buffer solutions from different buffer sets. Please note that the minimum distance allowed between two buffer solutions is  $\Delta 2$  pH units.

SOP calibration allows you to:

- select up to three calibration points and three buffer sets.
- add a verification buffer.
- specify a maximum deviation (0 ... 0.5 pH units) for the verification buffer as delta pH.

Configuration can also be carried out using the Paraly SW112 PC software.

### User Management (Access Control)

Up to four users, each with their own access rights, can be created for configuration, calibration, and the data logger (see page 53).

An access lock for the data logger allows only logger data to be displayed in the absence of a PIN code.

### Sensor Verification

To make sure that only selected sensors can be operated on the meter, you can evaluate the sensor type and/or the "TAG" and "Group" data stored in the sensor.

The sensor will only be accepted if the data stored in the sensor corresponds to the data stored in the meter.

### Temperature Adjustment

(also separately available as Option 002 TEMP.CAL)

For Memosens sensors, you can perform a 1-point calibration of the internal temperature detector.

Option 002 Temp.cal is included in Option 001 SOP. See p. 58 for a description.

## Enabling Option 001 SOP

- 1) From within measuring mode, press the **Menu** softkey.
- 2) Select "Configuration" and press **enter** to confirm.
- 3) Select Option "001 SOP" and enter your activation code.

## Configuring SOP Cal

The "Configuration > Calibration" menu is extended as follows:


+ Calibration	
Calibration mode	Calimatic   Manual   Data entry   <b>SOP cal</b>
Adapt SOP Cal	
Cal points	1-point   2-point   3-point
Buffer 1	
Buffer set	Mettler-Toledo 2.00/4.01/7.00/9.21 <b>Knick CaliMat</b> 2.00/4.00/7.00/9.00/12.00 Ciba 2.06/4.00/7.00/10.00 NIST Technical 1.68/4.00/7.00/10.01/12.46 NIST Standard 1.679/4.006/6.865/9.180 Hach 4.01/7.00/10.01/12.00 WTW 2.00/4.01/7.00/10.00 Hamilton 2.00/4.01/7.00/10.01/12.00 Reagecon 2.00/4.00/7.00/9.00/12.00 DIN 19267 1.09/4.65/6.79/9.23/12.75 Metrohm 4.00/7.00/9.00 User buffer 1
Buffer	Select a buffer from the selected set
Buffer 2	Select buffer set 2 and buffer (see buffer 1)
Buffer 3	Select buffer set 3 and buffer (see buffer 1)
Check	<b>Off</b>   On
Delta pH	<b>pH 0.05</b> (Enter maximum permitted deviation from verification buffer; exceeding this value generates an error message)
Verification buffer	Select buffer set and buffer (see buffer 1)

## Selecting SOP Calibration

- 1) In measuring mode, press the **Menu** softkey.
- 2) Select "Calibration" and confirm by pressing **enter**.
- 3) Select the "SOP cal" calibration mode and confirm by pressing **enter**.

## Performing an SOP Calibration

The sequence of buffers to be used is displayed as specified in the configuration. After each calibration step, the identified buffer is marked off in the display. The next operation procedure is displayed. Perform the calibration following the instructions given in the display.

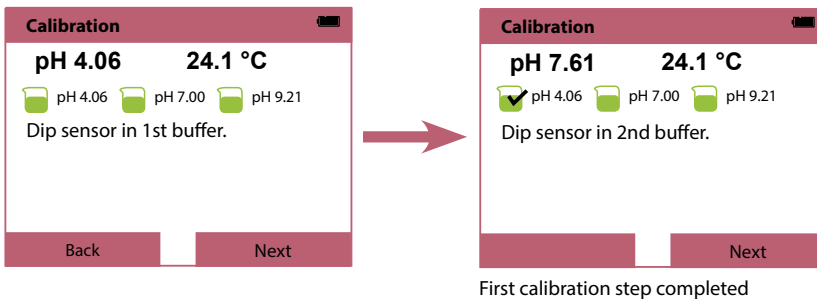

**Note:** Calibration is not possible when the device is connected via USB with the Paraly SW112 software.

pH

Redox

Oxy

Cond

## User Management (Access Control)

Up to four users, each with their own access rights, can be created for configuration, calibration, and the data logger.

Configuration can also be carried out using the Paraly SW112 PC software.

### Enabling User Management

- 1) From within measuring mode, press the **Menu** softkey.
- 2) Select "Configuration" and press **enter** to confirm.
- 3) Select "User management"/"Management – Enable"  
(with Option 003 Multichannel enabled in "General").
- 4) Select  
User = ADMIN  
PIN code = 1989 (factory setting)
- 5) Press **enter**.
- 6) To create more users / assign more PIN codes: Press the **Continue** softkey,  
see next page.

**Note:** User management settings made on the device also apply to the Paraly PC software. Access to the device via Paraly is then only possible following entry of the correct PIN code.

pH

Redox


Oxy

Cond


## Setting Up Users / Changing the PIN Code

All users can be assigned a PIN code and provided or denied access to configuration, calibration, or the data logger.

1) Select a user (e.g., "User 1", default: ADMIN, PIN code 1989):

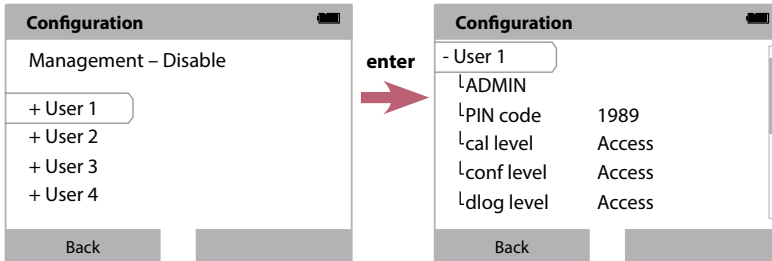

2) Select ADMIN to open the editor and enter the user name:

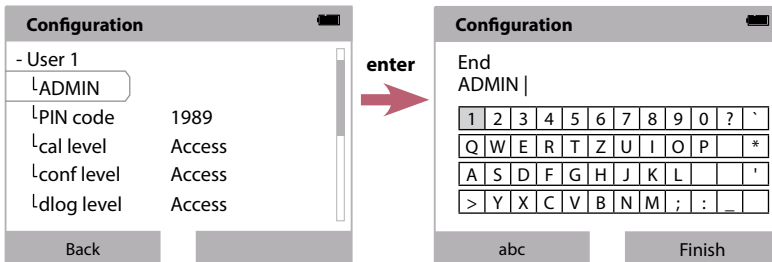

3) After making your settings, return to the menu selection.

4) Open User management with the **Access** softkey and select the user you require or

Restart the device; see p. 56.

**Important note:** If you lose the PIN code for the ADMIN user, access to the system will be blocked. The manufacturer can generate a rescue PIN code. If you have any questions, please contact Knick Elektronische Messgeräte GmbH & Co. KG using the contact details provided on the last page of this document.

pH


Redox

Oxy


Cond

## Entering the Rescue PIN Code

- 1) Go to Menu selection.
- 2) Select "Configuration" using the cursor keys.

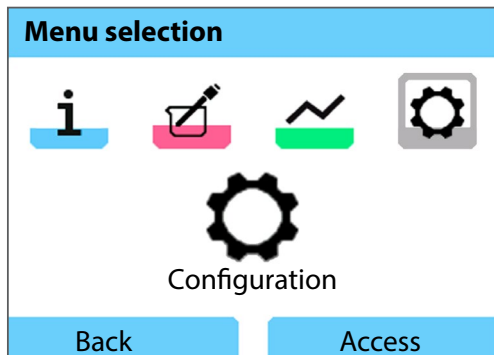

- 3) Press the arrow keys ▼ and ▲ at the same time.
- 4) Set the user to "ADMIN".

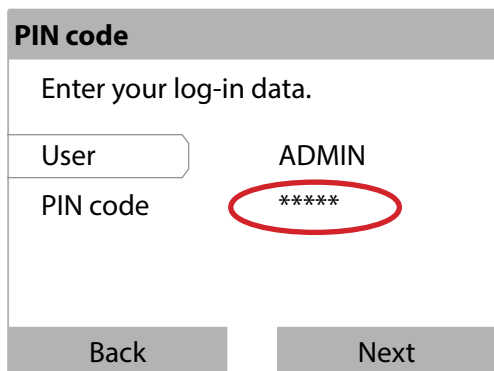

- 5) In "PIN code", enter the 5-digit rescue PIN code and confirm by pressing **enter**.
- 6) Press the **Continue** softkey.

pH

Redox

Oxy

Cond

## Login

When using Option 001 SOP and with user management enabled, you will be prompted to enter your log-in data when the device starts:

**PIN code**

Enter your log-in data.






User	User 1
PIN code	****

Back      Next

Enter the PIN code and press **enter** to confirm. Press the **Continue** softkey.

From Menu selection, you can directly access the "User management" menu.  
Right softkey: **User 1...4** or, if no one is logged in: **Access**

**Menu selection**

			
 Information			
Back	User 1		



pH

Redox

Oxy

Cond

## Sensor Verification

To make sure that only selected sensors can be operated on the meter, you can evaluate the following data stored in the sensor:

- Model (sensor model)
- TAG (e.g., point of measurement)
- Group (e.g., facility)

With Option 001 enabled, the "Configuration" menu is extended as follows:

- Sensor verification		
Check model	<b>Off</b>	Info   Reject
Check TAG	<b>Off</b>	Info   Reject
Check group	<b>Off</b>	Info   Reject

You can select the following options:

- Off**            No verification.
- Info**          When a wrong sensor is connected, an error message will be displayed.  
Nevertheless, you can continue working with the sensor.
- Reject**        Here you specify values with which the sensor will be rejected.

pH

Redox

Oxy

Cond

## Option 002 Temp.cal

(included in Option 001 SOP)

### Temperature Adjustment

For Memosens sensors, you can perform a 1-point calibration of the internal temperature detector.


## Enabling Option 002 Temp.cal

- 1) From within measuring mode, press the **Menu** softkey.
- 2) Select "Configuration" and press **enter** to confirm.
- 3) Select Option "002 Temp.cal" and enter your activation code.

## Selecting Temperature Calibration

- 1) From within measuring mode, press the **Menu** softkey.
- 2) Select "Calibration" and confirm by pressing **enter**.
- 3) Select the "Temperature" calibration mode and confirm by pressing **enter**.

For Memosens sensors, you can perform a 1-point calibration of the internal temperature detector. To do so, enter the reference temperature and confirm the temperature adjustment by pressing the **Apply** softkey:

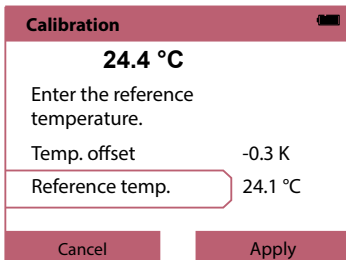

The screenshot shows a "Calibration" screen with a red header. The current temperature is displayed as 24.4 °C. Below this, it prompts the user to "Enter the reference temperature." The "Temp. offset" is shown as -0.3 K. A text input field for "Reference temp." contains the value 24.1 °C. At the bottom, there are two buttons: "Cancel" and "Apply".

Calibration	☰
24.4 °C	
Enter the reference temperature.	
Temp. offset	-0.3 K
Reference temp.	24.1 °C
Cancel	Apply

pH

Redox

Oxy

Cond

## Option 003 Multichannel

This option enables simultaneous operation of two Memosens sensors or, depending on the model, one Memosens sensor and one analog pH/ORP or conductivity sensor. The sensors can be separately configured and calibrated.

The data logger records the measured values from both sensors at the same time.

### Enable Option

- 1) From within measuring mode, press the **Menu** softkey.
- 2) Select "Configuration" and press **enter** to confirm.
- 3) Select the option "003 Multichannel" and enter the activation code.


The option is now enabled. To disable it, see p. 63.

An activation code is not required to re-enable the option.

### Sensor Connection

Connect the Memosens sensors or, depending on the model, one Memosens sensor and one analog pH/ORP or conductivity sensor.

See the chapter "Connecting a Sensor", p. 11.

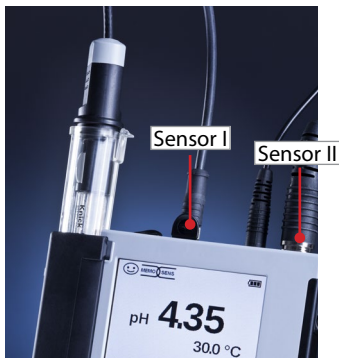


The Memosens sensors are connected to sensor sockets I and II, or one Memosens sensor is connected to sensor socket I and the SE340 optical oxygen sensor is connected to sensor socket II.




The measuring device identifies the sensors.

The measured values from the connected sensors are displayed.

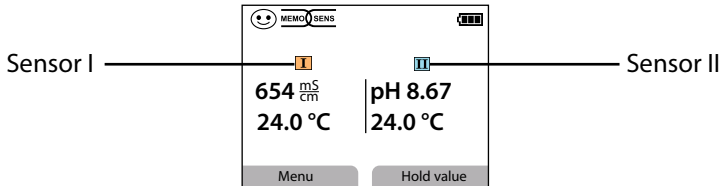

Press the **meas** key repeatedly to display all recorded values from both sensors in succession (see example below).

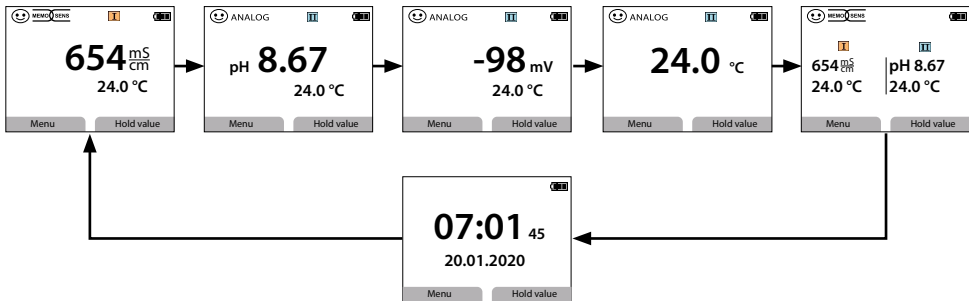

**Note:** If Option 001 SOP is activated and users have been set up, a valid user PIN must be entered during configuration and calibration, and when opening the data logger. See the chapter “Setting Up Users”, p. 54.

pH

Redox

Oxy


Cond

## Configuration

For selection of the configuration function, see p. 18.

Go to "General" to configure your device settings.

Then select a sensor.

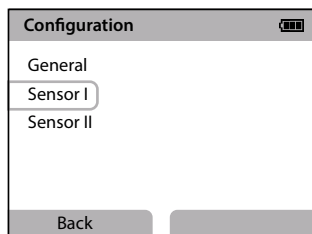

After selecting sensors, carry out the configuration applicable to the sensor's process variable.

For configuration, see p. 18ff.


Repeat these steps for the second sensor.

You can select your sensors in any order.

## Calibration

For selection of the calibration function, see p. 26.

A sensor must be selected after selecting the calibration function.

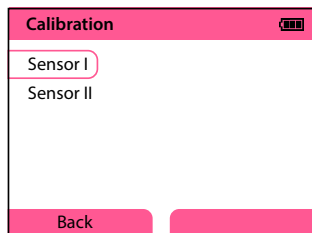

After selecting sensors, carry out the calibration applicable to the sensor's process variable.

For calibration, see p. 26ff.

Repeat these steps for the other sensor.

You can select your sensors in any order.

pH

Redox

Oxy

Cond

## Data Logger

For selection of the data logger function and configuration, see p. 40ff.

After selecting “Configure data logger”, a sensor must be selected. The data logger functions for this sensor are defined in multichannel mode. These settings define the data logger’s recording functions for both sensors.

**Example:** Sensor II is selected. The data logger’s settings are made on the basis of sensor II. Different parameters are available depending on the sensor type.

The choice of trigger defines the recording’s process variable. The “Difference” and “Limit” logger types use this process variable to control the recording.

Data logger	
Meas.point	---
Note	---
Sensor	Sensor I
Trigger	Circular
Recording	Circular
Logger type	Difference
Back	Start

Data logger	
Configure data logger	
View logger data	
Delete logger data	
Entries occupied: 31	
Remaining entries: 9969	
Back	Start

Press “Back” to return to the data logger menu and display the logger data.  
Select “View logger data”.

Data logger	
Filter by	Meas.point
Meas. point	---
Parameter	All
Back	Display

Select the process variable for display.

Data logger	
14.01.2020 11:59:26	
654 $\frac{mS}{cm}$	pH 8.67
24.0 °C	24.0 °C
Meas. point ---	
Note ---	
1/200	
Back	Graphic

The measured values are displayed. Use the arrow keys ◀▶ to show the data logger’s entries in succession.

To display a curve (graph), a process variable **must** be selected in “Parameter”. See the information on p. 42.

pH



Redox

Oxy

Cond

## Deactivate Option 003

- 1) From within measuring mode, press the **Menu** softkey.
- 2) Select "Configuration" and press **enter** to confirm.
- 3) Select the option "003 Multichannel" and press **enter**.
- 4) Confirm the prompt "Disable 2nd channel?" with "**Yes**".

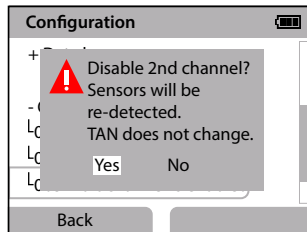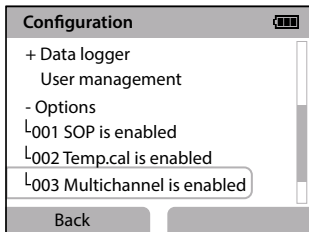

pH

Redox

Oxy

Cond

## Accessories/Options

<b>Accessories</b>	<b>Order No.</b>
Robust field case (for meter, sensor, various small parts, and User Manual)	ZU0934
Li-ion battery	ZU0925
Replacement quiver (5 units)	ZU0929
Base stand for mounting up to 3 sensors with base plate made of stainless steel	ZU6953
MemoView incl. ZU1060 cable, with 2x M8 connectors	ZU1059
Measuring cable with M8 connector for sensors with Memosens connector	
Length 1.5 m / 4.92 ft	CA/MS-001XFA-L
Length 2.9 m / 9.51 ft	CA/MS-003XFA-L
Measuring cable for digital sensors with 4-pin M12 socket, 4-pin M8 connector	
Length 1.5 m / 4.92 ft	CA/MS-001XDA-L
Length 2.9 m / 9.51 ft	CA/MS-003XDA-L



pH

Redox

Oxy

Cond

## TAN Options

## Order No.

SOP cal calibration method<sup>1)</sup>: user management,  
sensor verification, temperature detector adjustment in the  
Memosens sensor (offset correction)

SW-P001

Temperature detector adjustment in the Memosens sensor  
(offset correction)

SW-P002

Multichannel function

SW-P003

Paraly SW112 PC software for configuration and firmware updates:  
Free download from [www.knick.de](http://www.knick.de)

Please visit our website for more information on our product range: [www.knick.de](http://www.knick.de).

1) with pH only

pH

ORP

## pH, ORP Accessories

### Item

Inspection Certificate 3.1 for Portavo/Portamess pH

### Order No.

ZU0268/9nnpH

## pH Sensors

Please visit our website for more information on our product range: [www.knick.de](http://www.knick.de).

## Knick CaliMat (pH) Buffer Solutions

Ready-to-Use Quality pH Buffer Solutions

pH Value (20 °C/68 °F)	Quantity	Order No.
2.00	250 ml	CS-P0200/250
4.00	250 ml	CS-P0400/250
	1000 ml	CS-P0400/1000
	3000 ml	CS-P0400/3000
7.00	250 ml	CS-P0700/250
	1000 ml	CS-P0700/1000
	3000 ml	CS-P0700/3000
9.00	250 ml	CS-P0900/250
	1000 ml	CS-P0900/1000
	3000 ml	CS-P0900/3000
12.00	250 ml	CS-P1200/250

### Buffer Solution Sets (20 °C/68 °F)

Set 4.00	3 x 250 ml	CS-PSET4
Set 7.00	3 x 250 ml	CS-PSET7
Set 9.00	3 x 250 ml	CS-PSET9
Set 4.00, 7.00, 9.00	250 ml each	CS-PSET479
KCl solution, 3 molar	250 ml	ZU0062

## Accessories for Conductivity

Item	Order No.
Flexible connecting cable for SE680 sensor, M12 4-pin, M8 4-pin	CA/M12-001M8-L
Flow cell for sensors with Ø 12 mm and 15.3 mm	ZU1014
Adapter for connecting a conductivity sensor with 2 banana plugs to the Portavo 907 MULTI Cond socket	ZU0289
Inspection Certificate 3.1 for Portavo/Portamess Cond	ZU0268/9nnCOND

## Conductivity Sensors

Please visit our website for more information on our product range: [www.knick.de](http://www.knick.de).

## Conductivity Standards for determining a cell constant

Ready-to-Use Solutions	Quantity	Order No.
1.3 µS/cm, KCl	300 ml	ZU0701
15 µS/cm, KCl	500 ml	CS-C15K/500
147 µS/cm, KCl	500 ml	CS-C147K/500
1413 µS/cm, KCl	500 ml	CS-C1413K/500
12.88 µS/cm, KCl	500 ml	CS-C12880K/500

## Solutions for Preparation

NaCl concentrate, for preparing 1000 ml of a 0.1 mol/l saline solution for cell constant calibration	1 ampoule	ZU6945
--	-----------	--------

## Oxy

**Accessories for Oxygen**

<b>Item</b>	<b>Order No.</b>
Sensor protector that also serves as a calibration beaker for the SE340 optical oxygen sensor	ZU0911
Membrane cap with memory chip for the SE340 optical oxygen sensor	ZU0913
Flow cell for sensors with Ø 12 mm and 15.3 mm	ZU1014
O <sub>2</sub> electrolyte	ZU0565
Maintenance kit for SE715/1-MS (electrolyte, 3 membrane caps)	ZU0879
Adapter for process sensors with Ø 12 mm and PG 13.5 thread for use with quiver	ZU0939
Sensor protector for process sensors with Ø 12 mm and PG 13.5 thread	ZU1054
Sensor protector made of PVDF for process sensors with Ø 12 mm and PG 13.5 thread	ZU1121

**Oxygen Sensors**

Please visit our website for more information on our product range: [www.knick.de](http://www.knick.de).

pH

ORP

Oxy

Cond

<b>Connections</b>	1x M8 socket, 4 pins, for flexible Memosens lab cable 1x micro USB-B for data transmission to PC or printer connection 1x M12 socket, 8-pin, for flexible connecting cable for Memosens sensors or SE340 sensor (optical oxygen)	
<b>Air pressure measurement</b>	700 ... 1100 hPa	
<b>Device operation</b>	Easy-to-use menu navigation with graphic symbols and detailed user hints in plain text	
Languages	German, English, French, Spanish, Italian, Portuguese, Chinese	
Sensoface	Status display (friendly, neutral, sad)	
Status indicators	For battery condition, logger	
Graphic display	QVGA TFT display with white backlighting	
Keypad	[on/off], [meas], [enter], [◀], [▶], [▲], [▼], 2 context-sensitive softkeys	
<b>Data logger</b>	Space for 10,000 entries	
Recording	Manual, interval- or event-controlled with management of tag numbers and annotations	
<b>Cal data logger MemoLog</b> (Memosens only)	Can save up to 100 Memosens calibration records	
	Recording	Directly retrievable via MemoSuite or Paraly SW 112 (USB)
	Can be shown on the display	Manufacturer, sensor type, serial no., zero point, slope, calibration date

- 1) at rated operating conditions
- 2) ± 1 digit
- 3) Plus sensor error

pH

ORP

Oxy

Cond

<b>Communication</b>	USB 2.0
Profile	HID, driverless installation
Usage	Data transfer and configuration via the Paraly SW 112 software
<b>Diagnostic functions</b>	
Sensor data (Memosens only)	Manufacturer, sensor type, serial number, wear, operating time, remaining lifetime, max. temperature, adaptive calibration timer, calibration and adjustment data, SIP, CIP, and autoclaving counter
Calibration data	Calibration date; pH/Oxy: Zero point, slope; Cond: Cell constant
Device self-test	Automatic memory test (FLASH, EEPROM, RAM)
Device data	Device type, software version, hardware version
<b>Data retention</b>	Parameter, calibration data > 10 years
<b>EMC</b>	EN 61326-1 (General requirements)
Emitted interference	Class B (residential)
Immunity to interference	Industrial applications EN 61326-2-3 (Particular requirements for transducers)
<b>RoHS conformity</b>	According to Directive 2011/65/EU
<b>Power supply</b>	4 x AA alkaline batteries or 1x Li-ion battery, USB chargeable
<b>Rated operating conditions</b>	
Ambient temperature	-10 ... 55 °C / 14 ... 131 °F
Transport/ Storage temperature	-25 ... 70 °C / -13 ... 158 °F
Relative humidity	0 ... 95 %, brief condensation permissible
<b>Housing</b>	
Material	PA12 GF30 (silver gray RAL 7001) + TPE (black)
Ingress protection	IP66/67 with pressure compensation
Dimensions	Approx. 132 x 156 x 30 mm / 5.2 x 6.14 x 1.18 inches
Weight	Approx. 500 g / 1.10 lbs
<b>Printer</b>	Printer protocols: HP-PCL, Epson, Samsung, IBM (ASCII texts) Connection via standard USB cable and USB adapter (A female to B male)

pH

ORP

<b>Memosens pH input (also ISFET)</b>	M8 socket, 4 pins, for flexible Memosens lab cable or M12 socket, 8-pin, for flexible connecting cable for Memosens sensors	
Display ranges <sup>4)</sup>	pH	-2.00 ... 16.00
	mV	-1999 ... 1999 mV
	Temperature	-50 ... 250 °C / -58 ... 482 °F
<b>Sensor standardization *</b>	pH calibration	
Operating modes *	Calimatic	Calibration with automatic buffer recognition
	Manual	Manual calibration with entry of individual buffer values
	Data entry	Data entry of zero and slope
Calimatic buffer sets *	-01- Mettler-Toledo	2.00/4.01/7.00/9.21
	-02- Knick CaliMat	2.00/4.00/7.00/9.00/12.00
	-03- Ciba (94)	2.06/4.00/7.00/10.00
	-04- NIST technical	1.68/4.00/7.00/10.01/12.46
	-05- NIST standard	1.679/4.006/6.865/9.180
	-06- HACH	4.01/7.00/10.01/12.00
	-07- WTW techn. buffers	2.00/4.01/7.00/10.00
	-08- Hamilton	2.00/4.01/7.00/10.01/12.00
	-09- Reagecon	2.00/4.00/7.00/9.00/12.00
	-10- DIN 19267	1.09/4.65/6.79/9.23/12.75
	-11- Metrohm	4.00/00/9.00
	-U1- (User)	loadable via Paraly SW 112
Permissible calibration range	Zero point	6 ... 8 pH
	With ISFET:	-750 ... 750 mV
	Operating point (asymmetry)	
	Slope	approx. 74 ... 104 % (possibly restricting notes from Sensoface)
<b>Calibration timer<sup>*)</sup></b>	Interval 1 ... 99 days, can be switched off	
<b>Sensoface</b>	Provides information on the condition of the sensor	
Evaluation of	Zero point/slope, response time, calibration interval	

\*) User-defined

4) Ranges dependent on Memosens sensor

## ORP

---

<b>Memosens input</b>	M8 socket, 4 pins, for flexible Memosens lab cable or
<b>ORP</b>	M12 socket, 8-pin, for flexible connecting cable for Memosens sensors
Display ranges <sup>4)</sup>	mV -1999 ... 1999 mV
	Temperature -50 ... 250 °C / -58 ... 482 °F
Sensor standardization *	ORP calibration (zero offset)
Permissible calibration range	$\Delta$ mV (offset) -700 ... 700 mV

\*) User-defined

4) Ranges dependent on Memosens sensor



<b>Memosens conductivity input</b>	M8 socket, 4 pins, for flexible Memosens lab cable or M12 socket, 8-pin, for flexible connecting cable for Memosens sensors	
Measuring range	SE615/1-MS sensor 10 $\mu\text{S}/\text{cm}$ ... 20 $\text{mS}/\text{cm}$	
Measuring cycle	Approx. 1 s	
Temperature compensation	Linear 0 ... 20 %/K, adjustable reference temperature nLF: 0 ... 120 °C / 32 ... 248 °F NaCl (ultrapure water with traces) HCl (ultrapure water with traces) NH <sub>3</sub> (ultrapure water with traces) NaOH (ultrapure water with traces)	
Display resolution (autoranging)	Conductivity	0.001 $\mu\text{S}/\text{cm}$ ( $c < 0.05 \text{ cm}^{-1}$ ) 0.01 $\mu\text{S}/\text{cm}$ ( $c = 0.05 \dots 0.2 \text{ cm}^{-1}$ ) 0.1 $\mu\text{S}/\text{cm}$ ( $c > 0.2 \text{ cm}^{-1}$ )
	Resistivity	00.00 ... 99.99 $\text{M}\Omega \text{ cm}$
	Salinity	0.0 ... 45.0 g/kg (0 ... 30 °C / 32 ... 86 °F)
	TDS	0 ... 5000 mg/l (10 ... 40 °C / 50 ... 104 °F)
	Concentration	0.00 ... 100 wt%
	<b>Concentration determination</b>	NaCl
	HCl	0 – 18 wt% (-20 °C / -4 °F) ... 0 – 18 wt% (50 °C / 122 °F)
	NaOH	0 – 13 wt% (0 °C / 32 °F) ... 0 – 24 wt% (100 °C / +212 °F)
	H <sub>2</sub> SO <sub>4</sub>	0 – 26 wt% (-17 °C / -1.4 °F) ... 0 – 37 wt% (110 °C / 230 °F)
	HNO <sub>3</sub>	0 – 30 wt% (-20 °C / -4 °F) ... 0 – 30 wt% (50 °C / 122 °F)
	H <sub>2</sub> SO <sub>4</sub>	94 – 99 wt% (-17 °C / -1.4 °F) ... 89 – 99 wt% (115 °C / 239 °F)
	HCl	22 – 39 wt% (-20 °C / -4 °F) ... 22 – 39 wt% (50 °C / 122 °F)
	HNO <sub>3</sub>	35 – 96 wt% (-20 °C / -4 °F) ... 35 – 96 wt% (50 °C / 122 °F)
	H <sub>2</sub> SO <sub>4</sub>	28 – 88 wt% (-17 °C / -1.4 °F) ... 39 – 88 wt% (115 °C / 239 °F)
	NaOH	15 – 50 wt% (0 °C / 32 °F) ... 35 – 50 wt% (100 °C / +212 °F)
<b>Sensor adjustment</b>	Cell constant	Input of cell constant with simultaneous display of conductivity value and temperature
	Solution input	Input of calibration solution conductivity with simultaneous display of cell constant and temperature
	Auto	Automatic determination of cell constant with KCl or NaCl solution

## Oxy

**Memosens input for amperometric oxygen** M8 socket, 4 pins, for flexible Memosens lab cable or M12 socket, 8-pin, for flexible connecting cable for Memosens sensors

Display ranges <sup>4)</sup>	Saturation	0.000 ... 200.0 %
	Concentration	000 µg/l ... 20.00 mg/l
	Partial pressure	0.0... 1000 mbar
	Volume concentration in gas	0.00 ... 99.99 vol%
Temperature meas. range <sup>4)</sup>	-20 ... 150 °C / -4 ... 302 °F	

**Sensor adjustment** Automatic calibration in air (100 % rel. hum.)  
Zero calibration

**Storage** In quiver with moisture sponge

**Input for optical oxygen** M12 socket, 8-pin

OXY meas. ranges at 20 °C / 68 °F	Saturation	0.000 ... 200.0 %
	Concentration	000 µg/l ... 20.00 mg/l
	Partial pressure	0.0... 1000 mbar
	Volume concentration in gas	0.00 ... 99.99 vol%
Response time	t90 < 30 s	
	t99 < 60 s	
Measurement error <sup>1,2,3)</sup>	Zero signal < 0.1 % of final saturation value	
Temperature meas. range <sup>4)</sup>	0 ... 50 °C / 32 ... 122 °F	
Measurement error <sup>1,2,3)</sup>	Temperature ± 0.2 K	

**Sensor adjustment** Automatic calibration in air  
Zero calibration

**Storage** In quiver with moisture sponge

1) at rated operating conditions

2) ± 1 digit

3) Plus sensor error

4) Ranges dependent on Memosens sensor

## Buffer Table, Mettler-Toledo

Nominal values in bold.

°C	pH			
0	2.03	4.01	7.12	9.52
5	2.02	4.01	7.09	9.45
10	2.01	4.00	7.06	9.38
15	2.00	4.00	7.04	9.32
20	2.00	4.00	7.02	9.26
<b>25</b>	<b>2.00</b>	<b>4.01</b>	<b>7.00</b>	<b>9.21</b>
30	1.99	4.01	6.99	9.16
35	1.99	4.02	6.98	9.11
40	1.98	4.03	6.97	9.06
45	1.98	4.04	6.97	9.03
50	1.98	4.06	6.97	8.99
55	1.98	4.08	6.98	8.96
60	1.98	4.10	6.98	8.93
65	1.99	4.13	6.99	8.90
70	1.99	4.16	7.00	8.88
75	2.00	4.19	7.02	8.85
80	2.00	4.22	7.04	8.83
85	2.00	4.26	7.06	8.81
90	2.00	4.30	7.09	8.79
95	2.00	4.35	7.12	8.77

pH

**Buffer Table, Knick CaliMat**

Nominal values in bold.

°C	pH				
0	2.01	4.05	7.09	9.24	12.58
5	2.01	4.04	7.07	9.16	12.39
10	2.01	4.02	7.04	9.11	12.26
15	2.00	4.01	7.02	9.05	12.13
<b>20</b>	<b>2.00</b>	<b>4.00</b>	<b>7.00</b>	<b>9.00</b>	<b>12.00</b>
25	2.00	4.01	6.99	8.95	11.87
30	2.00	4.01	6.98	8.91	11.75
35	2.00	4.01	6.96	8.88	11.64
40	2.00	4.01	6.96	8.85	11.53
50	2.00	4.01	6.96	8.79	11.31
60	2.00	4.00	6.96	8.73	11.09
70	2.00	4.00	6.96	8.70	10.88
80	2.00	4.00	6.98	8.66	10.68
90	2.00	4.00	7.00	8.64	10.48

## Buffer Table, Ciba

Nominal values: 2.06 4.00 7.00 10.00

°C	pH			
0	2.04	4.00	7.10	10.30
5	2.09	4.02	7.08	10.21
10	2.07	4.00	7.05	10.14
15	2.08	4.00	7.02	10.06
20	2.09	4.01	6.98	9.99
25	2.08	4.02	6.98	9.95
30	2.06	4.00	6.96	9.89
35	2.06	4.01	6.95	9.85
40	2.07	4.02	6.94	9.81
45	2.06	4.03	6.93	9.77
50	2.06	4.04	6.93	9.73
55	2.05	4.05	6.91	9.68
60	2.08	4.10	6.93	9.66
65	2.07 <sup>1)</sup>	4.10 <sup>1)</sup>	6.92 <sup>1)</sup>	9.61 <sup>1)</sup>
70	2.07	4.11	6.92	9.57
75	2.04 <sup>1)</sup>	4.13 <sup>1)</sup>	6.92 <sup>1)</sup>	9.54 <sup>1)</sup>
80	2.02	4.15	6.93	9.52
85	2.03 <sup>1)</sup>	4.17 <sup>1)</sup>	6.95 <sup>1)</sup>	9.47 <sup>1)</sup>
90	2.04	4.20	6.97	9.43
95	2.05 <sup>1)</sup>	4.22 <sup>1)</sup>	6.99 <sup>1)</sup>	9.38 <sup>1)</sup>

1) extrapolated

pH

**Buffer Table, NIST Technical Buffers**

Nominal values in bold.

°C	pH				
0	1.67	4.00	7.115	10.32	13.42
5	1.67	4.00	7.085	10.25	13.21
10	1.67	4.00	7.06	10.18	13.01
15	1.67	4.00	7.04	10.12	12.80
20	1.675	4.00	7.015	10.06	12.64
<b>25</b>	<b>1.68</b>	<b>4.005</b>	<b>7.00</b>	<b>10.01</b>	<b>12.46</b>
30	1.68	4.015	6.985	9.97	12.30
35	1.69	4.025	6.98	9.93	12.13
40	1.69	4.03	6.975	9.89	11.99
45	1.70	4.045	6.975	9.86	11.84
50	1.705	4.06	6.97	9.83	11.71
55	1.715	4.075	6.97	9.83 <sup>1)</sup>	11.57
60	1.72	4.085	6.97	9.83 <sup>1)</sup>	11.45
65	1.73	4.10	6.98	9.83 <sup>1)</sup>	11.45 <sup>1)</sup>
70	1.74	4.13	6.99	9.83 <sup>1)</sup>	11.45 <sup>1)</sup>
75	1.75	4.14	7.01	9.83 <sup>1)</sup>	11.45 <sup>1)</sup>
80	1.765	4.16	7.03	9.83 <sup>1)</sup>	11.45 <sup>1)</sup>
85	1.78	4.18	7.05	9.83 <sup>1)</sup>	11.45 <sup>1)</sup>
90	1.79	4.21	7.08	9.83 <sup>1)</sup>	11.45 <sup>1)</sup>
95	1.805	4.23	7.11	9.83 <sup>1)</sup>	11.45 <sup>1)</sup>

1) values added

**Buffer Table, NIST Standard (DIN 19266: 2015-05)**

Nominal values in bold.

°C	pH				
0	1.666	4.000	6.984	9.464	
5	1.668	3.998	6.951	9.395	13.207
10	1.670	3.997	6.923	9.332	13.003
15	1.672	3.998	6.900	9.276	12.810
20	1.675	4.000	6.881	9.225	12.627
<b>25</b>	<b>1.679</b>	<b>4.005</b>	<b>6.865</b>	<b>9.180</b>	<b>12.454</b>
30	1.683	4.011	6.853	9.139	12.289
35	1.688	4.018	6.844	9.102	12.133
37		4.022	6.841	9.088	
38	1.691				12.043
40	1.694	4.027	6.838	9.068	11.984
45					11.841
50	1.707	4.050	6.833	9.011	11.705
55	1.715	4.075	6.834	8.985	11.574
60	1.723	4.091	6.836	8.962	11.449
70	1.743	4.126	6.845	8.921	
80	1.766	4.164	6.859	8.885	
90	1.792	4.205	6.877	8.850	
95	1.806	4.227	6.886	8.833	

**Note:** The actual pH(S) values of the individual batches of the reference materials are documented in a certificate of an accredited laboratory. This certificate is supplied with the respective buffers. Only these pH(S) values should be used as standard values for the secondary reference buffer materials. Correspondingly, this standard does not include a table with standard pH values for practical use. The table above only provides examples of pH(S) values for orientation.

pH

**Buffer Table, HACH**Nominal values: 4.01 7.00 10.01 ( $\pm 0.02$  at 25 °C)

°C	pH		
0	4.00	7.118	10.30
5	4.00	7.087	10.23
10	4.00	7.059	10.17
15	4.00	7.036	10.11
20	4.00	7.016	10.05
25	4.01	7.00	10.00
30	4.01	6.987	9.96
35	4.02	6.977	9.92
40	4.03	6.97	9.88
45	4.05	6.965	9.85
50	4.06	6.964	9.82
55	4.07	6.965	9.79
60	4.09	6.968	9.76
65	4.10	6.98	9.71
70	4.12	7.00	9.66
75	4.14	7.02	9.63
80	4.16	7.04	9.59
85	4.18	7.06	9.56
90	4.21	7.09	9.52
95	4.24	7.12	9.48



## Buffer Table, WTW

Nominal values in bold.

°C	pH			
0	2.03	4.01	7.12	10.65
5	2.02	4.01	7.09	10.52
10	2.01	4.00	7.06	10.39
15	2.00	4.00	7.04	10.26
20	2.00	4.00	7.02	10.13
<b>25</b>	<b>2.00</b>	<b>4.01</b>	<b>7.00</b>	<b>10.00</b>
30	1.99	4.01	6.99	9.87
35	1.99	4.02	6.98	9.74
40	1.98	4.03	6.97	9.61
45	1.98	4.04	6.97	9.48
50	1.98	4.06	6.97	9.35
55	1.98	4.08	6.98	
60	1.98	4.10	6.98	
65	1.99	4.13	6.99	
70	2.00	4.16	7.00	
75	2.00	4.19	7.02	
80	2.00	4.22	7.04	
85	2.00	4.26	7.06	
90	2.00	4.30	7.09	
95	2.00	4.35	7.12	

pH

**Buffer Table, Hamilton**

Nominal values in bold.

°C	pH				
0	1.99	4.01	7.12	10.19	12.46
5	1.99	4.01	7.09	10.19	12.46
10	2.00	4.00	7.06	10.15	12.34
15	2.00	4.00	7.04	10.11	12.23
20	2.00	4.00	7.02	10.06	12.11
<b>25</b>	<b>2.00</b>	<b>4.01</b>	<b>7.00</b>	<b>10.01</b>	<b>12.00</b>
30	1.99	4.01	6.99	9.97	11.90
35	1.98	4.02	6.98	9.92	11.80
40	1.98	4.03	6.97	9.86	11.70
45	1.97	4.04	6.97	9.83	11.60
50	1.97	4.06	6.97	9.79	11.51
55	1.97	4.08	6.98	9.77	11.51
60	1.97	4.10	6.98	9.75	11.51
65	1.97	4.13	6.99	9.74	11.51
70	1.97	4.16	7.00	9.73	11.51
75	1.97	4.19	7.02	9.73	11.51
80	1.97	4.22	7.04	9.73	11.51
85	1.97	4.26	7.06	9.74	11.51
90	1.97	4.30	7.09	9.75	11.51
95	1.97	4.35	7.09	9.75	11.51

## Buffer Table, Reagecon

Nominal values in bold.

°C	pH				
0	2.01 <sup>1)</sup>	4.01 <sup>1)</sup>	7.07 <sup>1)</sup>	9.18 <sup>1)</sup>	12.54 <sup>1)</sup>
5	2.01 <sup>1)</sup>	4.01 <sup>1)</sup>	7.07 <sup>1)</sup>	9.18 <sup>1)</sup>	12.54 <sup>1)</sup>
10	2.01	4.00	7.07	9.18	12.54
15	2.01	4.00	7.04	9.12	12.36
20	2.01	4.00	7.02	9.06	12.17
<b>25</b>	<b>2.00</b>	<b>4.00</b>	<b>7.00</b>	<b>9.00</b>	<b>12.00</b>
30	1.99	4.01	6.99	8.95	11.81
35	2.00	4.02	6.98	8.90	11.63
40	2.01	4.03	6.97	8.86	11.47
45	2.01	4.04	6.97	8.83	11.39
50	2.00	4.05	6.96	8.79	11.30
55	2.00	4.07	6.96	8.77	11.13
60	2.00	4.08	6.96	8.74	10.95
65	2.00 <sup>1)</sup>	4.10 <sup>1)</sup>	6.99 <sup>1)</sup>	8.70 <sup>1)</sup>	10.95 <sup>1)</sup>
70	2.00 <sup>1)</sup>	4.12 <sup>1)</sup>	7.00 <sup>1)</sup>	8.67 <sup>1)</sup>	10.95 <sup>1)</sup>
75	2.00 <sup>1)</sup>	4.14 <sup>1)</sup>	7.02 <sup>1)</sup>	8.64 <sup>1)</sup>	10.95 <sup>1)</sup>
80	2.00 <sup>1)</sup>	4.16 <sup>1)</sup>	7.04 <sup>1)</sup>	8.62 <sup>1)</sup>	10.95 <sup>1)</sup>
85	2.00 <sup>1)</sup>	4.18 <sup>1)</sup>	7.06 <sup>1)</sup>	8.60 <sup>1)</sup>	10.95 <sup>1)</sup>
90	2.00 <sup>1)</sup>	4.21 <sup>1)</sup>	7.09 <sup>1)</sup>	8.58 <sup>1)</sup>	10.95 <sup>1)</sup>
95	2.00 <sup>1)</sup>	4.24 <sup>1)</sup>	7.12 <sup>1)</sup>	8.56 <sup>1)</sup>	10.95 <sup>1)</sup>

1) values added

pH

**Buffer Table, DIN 19267**

Nominal values in bold.

°C	pH				
0	1.08	4.67	6.89	9.48	13.95 <sup>1)</sup>
5	1.08	4.67	6.87	9.43	13.63 <sup>1)</sup>
10	1.09	4.66	6.84	9.37	13.37
15	1.09	4.66	6.82	9.32	13.16
20	1.09	4.65	6.80	9.27	12.96
<b>25</b>	<b>1.09</b>	<b>4.65</b>	<b>6.79</b>	<b>9.23</b>	<b>12.75</b>
30	1.10	4.65	6.78	9.18	12.61
35	1.10	4.65	6.77	9.13	12.45
40	1.10	4.66	6.76	9.09	12.29
45	1.10	4.67	6.76	9.04	12.09
50	1.11	4.68	6.76	9.00	11.89
55	1.11	4.69	6.76	8.96	11.79
60	1.11	4.70	6.76	8.92	11.69
65	1.11	4.71	6.76	8.90	11.56
70	1.11	4.72	6.76	8.88	11.43
75	1.11	4.73	6.77	8.86	11.31
80	1.12	4.75	6.78	8.85	11.19
85	1.12	4.77	6.79	8.83	11.09
90	1.13	4.79	6.80	8.82	10.99
95	1.13 <sup>1)</sup>	4.82 <sup>1)</sup>	6.81 <sup>1)</sup>	8.81 <sup>1)</sup>	10.89 <sup>1)</sup>

1) extrapolated

**Buffer Table, Metrohm**

Nominal values in bold.

°C	pH		
0	3.99	7.11	9.27
5	3.99	7.08	9.18
10	3.99	7.06	9.13
15	3.99	7.04	9.08
20	3.99	7.02	9.04
<b>25</b>	<b>4.00</b>	<b>7.00</b>	<b>9.00</b>
30	4.00	6.99	8.96
35	4.01	6.98	8.93
40	4.02	6.98	8.90
45	4.03	6.97	8.87
50	4.04	6.97	8.84
55	4.06	6.97	8.81
60	4.07	6.97	8.79
65	4.09	6.98	8.76
70	4.11	6.98	8.74
75	4.13	6.99	8.73
80	4.15	7.00	8.71
85	4.18	7.00	8.70
90	4.20	7.01	8.68
95	4.23	7.02	8.67

**A**

- AA batteries 10
- Access control (Option 001 SOP) 53
- Accessories for conductivity 67
- Accessories for oxygen 68
- Accessories for pH, ORP 66
- Accessories, general 64
- Arrow keys 9
- Auto, conductivity calibration 30
- Automatic calibration (conductivity) 30
- Automatic calibration (pH) 26

**B**

- Basic interval (limit value logger type) 39
- Battery capacity 10
- Battery compartment 10
- Battery icon 10
- Battery life, increasing 40
- Battery replacement 10
- Benchtop stand 8
- Buffer set (pH configuration) 19
- Buffer sets 66
- Buffer sets, configuring (pH) 44
- Buffer tables 75

**C**

- Calculation (conductivity configuration) 22
- Calibration (Cond), auto 30
- Calibration (Cond), cell constant 31
- Calibration (Cond), entry of solution 31
- Calibration, conductivity 30
- Calibration in air (Oxy) 32
- Calibration, ISFET 29
- Calibration mode 29
- Calibration of multichannel operation (option) 61
- Calibration (Oxy), data input 33
- Calibration, oxygen 32
- Calibration (Oxy), zero point 33

- Calibration (pH), Calimatic 26
- Calibration (pH), data input 27
- Calibration (pH), manual 27
- Calibration, pH/ORP combo sensor 28
- Calibration points (pH) 26
- Calibration record 14
- Calibration record, printout 36
- Calibration, Temp.cal (option) 58
- Calibration timer monitoring (Oxy) 33
- Calibration timer monitoring (pH) 27
- Calibration, zero point (operating point), ISFET 29
- CaliMat buffer solutions 66
- Calimatic calibration 26
- Calimatic (pH) 7
- Cal SOP (Option 001) 50
- Cell constant, conductivity calibration 31
- Charge level of batteries 10
- CIP (sensor information) 14
- Clearing the logger 42
- Combo sensor, pH/ORP, calibration 28
- Conductivity calibration 30
- Conductivity configuration 22
- Conductivity setup 22
- Conductivity, specifications 73
- Conductivity standards, product line 67
- Configuration of multichannel operation (option) 61
- Configure data logger 40
- Connecting a sensor 11
- Connecting cable for Memosens 11
- Connecting the sensors, Option 003 Multichannel 59
- Connections 11
- Connection, USB (battery) 10
- Creating a user (Option 001 SOP) 54
- Curve characteristic (data logger) 43

**D**

- Data input, Oxy calibration 33
- Data input, pH calibration 27
- Data logger configuration 40
- Data logger icons 37
- Data logger, operating modes 38
- Data Logger, Option 003 Multichannel 62
- Data logger, starting 42
- Data logger, stopping 42
- Data of the meter 69
- Delete logger data 42
- Delta range (data logger) 38
- Device info (Information menu) 17
- Device properties 6
- Device self-test 17
- Device test (Information menu) 17
- Difference (logger type) 38
- Digital optical oxygen measurement 7
- Display 9
- Display icons 13
- Display test 17
- Disposal 2

**E**

- Electrolyte, Oxy calibration 32
- Enable Option 51
- Entry of solution, conductivity calibration 31
- ERROR (error messages) 48
- Error messages, overview 48
- Event interval (limit value logger type) 39

**F**

- Features 6
- Field case (accessory) 64

**H**

- Help texts 48
- Hook 8



## I

- Icons, device status 13
- Icons for data logger 37
- Icons, menus 9
- In air, Oxy calibration 32
- Increasing the battery life 40
- Individual buffer sets (pH) 44
- Information (menu) 14
- Info texts 48
- Inserting the batteries 10
- Installation factor, calibration 31
- Intended use 6
- Interfaces 11
- Interval and difference (logger type) 39
- Interval (logger type) 38
- Introduction 6
- ISFET calibration 29

## K

- Keypad 9
- Keypad test 17
- Knick CaliMat buffer solutions 66

## L

- Li-ion battery (accessory) 64
- Limit value (logger type) 39
- Lithium-ion battery (commissioning) 10
- Logger type "Difference" 38
- Logger type "Interval" 38
- Logger type "Interval and difference" 39
- Logger type "Limit value" 39
- Logger type "Shot" 38
- Login (Option 001 SOP) 56
- Loss of PIN code 54

**M**

Manual calibration (pH) 27  
meas, switch-on 12  
Measured values, printout 35  
Measurement 34  
Measurement Display, Option 003 multichannel 60  
Measuring cable for Memosens sensors 64  
Membrane 32  
Membrane body replacement 32  
Membrane operating time (optical oxygen) 14  
Membrane serial no. (optical oxygen) 14  
MemoLog (Memosens only) 16  
Memosens cable (accessory) 64  
Memosens connecting cable 11  
Memosens (digital sensors) 7  
Memosens sensors, connection 11  
MemoView ZU1059 7  
Menu icons 9  
Messages (Information menu) 16  
Micro USB port 11  
Multichannel Operation, Option 003 59

**N**

Nameplate 8  
Network diagram 15  
Note (data logger) 41

**O**

on/off, switch-on 12  
Operating modes of data logger 38  
Optical oxygen measurement 7  
Option 001 SOP 50  
Option 002 Temp.cal 58  
Option 003 Multichannel 59  
Options, description 50  
Options, order codes 65  
ORP Calibration 28  
ORP configuration 20

- ORP setup 20
  - Overview 6
  - Overview of error messages 48
  - Overview of status messages 45
  - Oxygen calibration (Oxy) 32
  - Oxygen configuration 24
  - Oxygen setup 24
  - Oxygen, specifications 74
- P**
- Package contents 5
  - Paraly SW112 PC software 44
  - Paraly SW112 (software) 44
  - Paraly SW112 software 44
  - Passcode, loss 54
  - pH buffer solutions 66
  - pH Calibration 26
  - pH configuration 18
  - pH/ORP sensor, calibration 28
  - pH setup 18
  - pH, specifications 71
  - PIN code, changing (Option 001 SOP) 54
  - PIN code, loss 54
  - Power-on 12
  - Pressure correction (Oxy configuration) 24
  - Pre-trigger (limit value logger type) 39
  - Printing 35
  - Printing a calibration record 36
  - Printing measured values 35
  - Product features 6
  - Product line 64
  - Product presentation 6
  - Protective cover 8

**R**

- Real-time clock 6
- Rechargeable battery, Li-ion 10
- Replacement quiver 64
- Replacing the electrolyte (Oxy) 32
- Replacing the membrane (Oxy) 32
- Rescue PIN code, entry 55
- Rescue PIN code, request 54
- Returns 2

**S**

- Safety instructions 5
- Saving a membrane module replacement (Oxy) 32
- Sensoface criteria 46
- Sensoface messages 45
- Sensor connection 11
- Sensor connection, Option 003 Multichannel 59
- Sensor diagram 15
- Sensor information 14
- Sensor monitor 16
- Sensor operating time (sensor information) 14
- Sensor selection, Option 003 Multichannel 61
- Sensor serial no. (sensor information) 14
- Sensor verification, Option 001 SOP 57
- Setting up users 54
- Shot (logger type) 38
- SIP (sensor information) 14
- Slope, oxy calibration 32
- Softkey 9
- SOP cal calibration (option) 50
- SOP calibration (Option 001) 52
- Specifications 69
- Starting the data logger 42
- Status messages, overview 45
- Stopping the data logger 42
- Suspending the meter 8
- Switching on the meter 12
- Symbols in display 13

## **T**

- Table of error messages 48
- Table of info texts 45
- TAG entry (Cond) 30
- TAG entry (ISFET) 29
- TAG entry (ORP) 28
- TAG entry (Oxy) 32
- TAG entry (pH) 26
- TAN options, description 50
- TAN options, order codes 65
- Temp.cal (option) 58
- Toggling the measurement display 34

## **U**

- USB port (battery) 10
- USB port, micro 11
- User management (Option 001 SOP) 53

## **V**

- Value-added features 7
- Viewing the logger data 42

## **Z**

- Zero calibration (Cond) 31
- Zero calibration (ISFET) 29
- Zero calibration (Oxy) 33







**Knick**  
**Elektronische Messgeräte**  
**GmbH & Co. KG**

**Headquarters**

Beuckestraße 22 • 14163 Berlin

Germany

Phone: +49 30 80191-0

Fax: +49 30 80191-200

info@knick.de

www.knick.de

**Local Contacts**

www.knick-international.com

Copyright 2022 • Subject to change

Version: 4

This document was published on January 28, 2022

The latest documents are available for download on our website  
under the corresponding product description.



TA-209.8MU-KNEN04

098230